

70m 4K60Hz HDMI 4x4 Seamless Matrix Video Wall / Multi-Viewer

OPERATION MANUAL



Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

SURGE PROTECTION DEVICE RECOMMENDED

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

Catalogue

1. Features	4
2. Package Contents	4
3. Specifications	5
4. Panel Descriptions	5
5. Wiring Diagram	6
6. Input / Output Channel Key Operation	8
7. Panel Control	8
8. Remote Control	29
9. Audio Extraction	30
10. RS232 Control	31
11. Scene Instructions	32
12. Web Control	40
13. WEB	41
14. Firmware Updating	46
15. Maintenance	47
16. Product Service	47
17. Warranty	47

1. Features

- 70m 4x4 HDMI 2.0 Seamless Matrix, 4 HDMI Inputs to 4 RJ45 Outputs with 4 HDMI Loops out
- Supports 4K@60HZ 4:4:4 8bit, HDCP 2.2
- **Seamless Matrix Mode:** 4 in 4 out no switching delay and signal loss
- **Video Wall Mode:** Up to 7 different modes built-in and supports cascading
- **Multi-Viewer Mode:** Display 4 videos on the same screen and has multiple modes built-in
- **Audio Matrix:** Analog audio embedded & extraction, the audio can be independently switching
- With EDID management
- Supports LPCM 2.0 Audio format
- Supports PoC (Power over Cable): RX powered by TX.
- Control via Panel button, Remote, RS232, TCP/IP Control

2. Package Contents

- 1x Matrix
- 1x 12V/4A DC power adapter (5.5*2.1mm with screw)
- 1x Remote control
- 5x IR Transmitter cables and 5x Receiver cables
- 1x CD for user manual & Command list
- 1x 3Pin Phoenix terminal plug

3. Specifications

Operating Temperature Range	-5 to +40°C(23 to +104 °F)
Storage Temperature Range	-10 to +60°C(-14 to +140 °F)
Operating Humidity Range	5 to 90 % RH (no condensation)
Video Input Connectors	4x HDMI Type A, 19-pin, female
Video Output Connectors	4x RJ45 female and 4x HDMI Type A, 19-pin, female
Bandwidth	18Gbit/s
Video Format Supported	4K@60Hz,YUV4:4:4 8bit 4k@30Hz/1080P/1080i/720P
Audio Formats Supported	LPCM 2.0
HDCP Compliant	HDCP 2.2 and HDCP 1.4
Input ports	4x HDMI Ports
Output ports	4x RJ45 Ports and 4x HDMI Ports
Matrix mode	4x4 seamless switching
Video wall mode	Multiple video wall modes
Multi-viewer mode	Multiple multi-viewer modes
Power Consumption	41 watts (Max.)
Dimensions	Matrix: L262 x W163 x H36 mm
Mass (Main Unit)	Matrix: 2710g


4. Panel Descriptions

4.1 Matrix Front Panel



- ① LCD screen and IR receiving port, indicator light
- ② Output button OUT1~4 & Input button IN1~4
- ③ MENU button: PRESET; MANU; UP; DOWN; LOCK; ENTER

4.2 Matrix Rear Panel

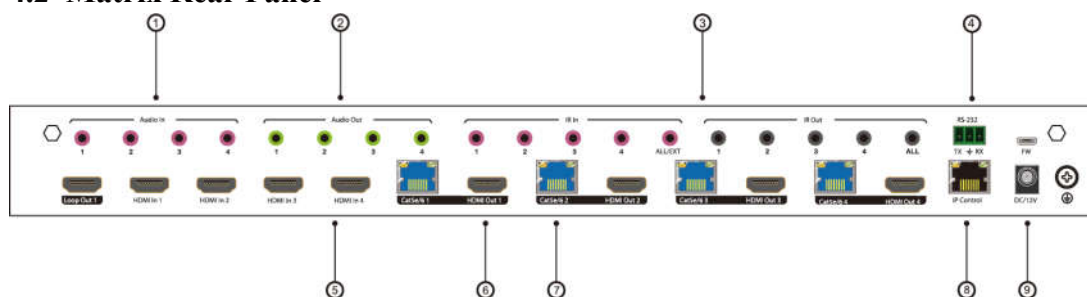


- ① Audio In
- ② Audio Out
- ③ IR In & Out
- ④ RS232 port
- ⑤ HDMI IN x4 with 1x HDMI Loop out
- ⑥ HDMI OUT x4
- ⑦ RJ45 x4
- ⑧ Ethernet port
- ⑨ Power input 12V/4A and FW updating Port

5. Wiring Diagram


5.1 Seamless Matrix Mode



5.2 Video Wall Mode

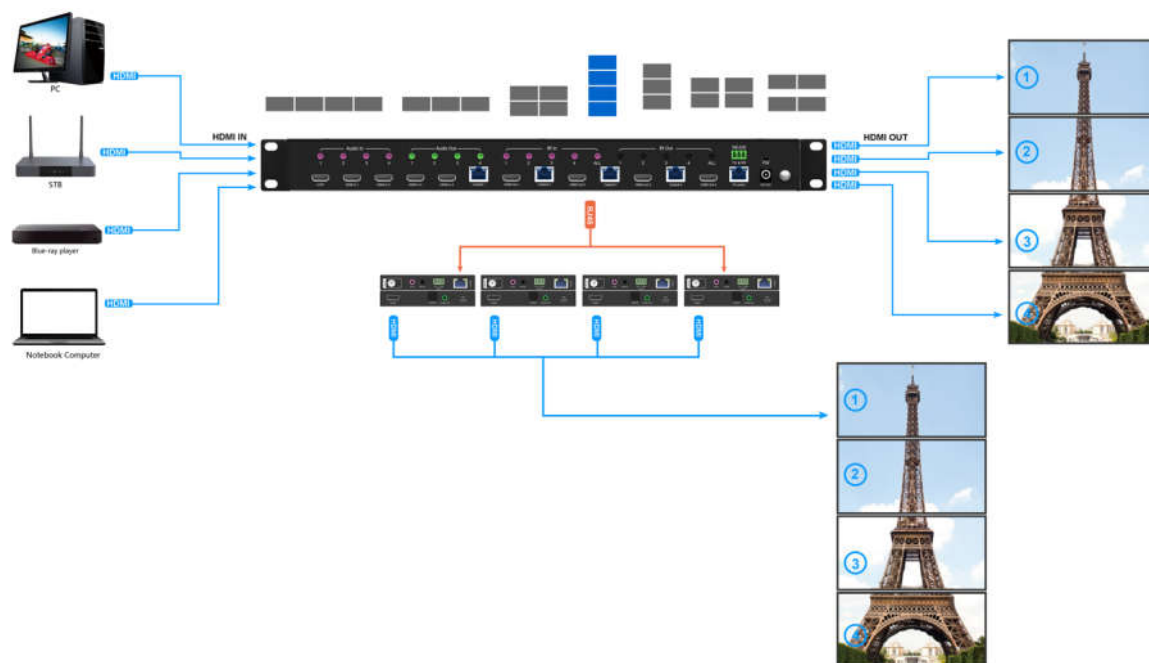

5.3 Multi-Viewer mode

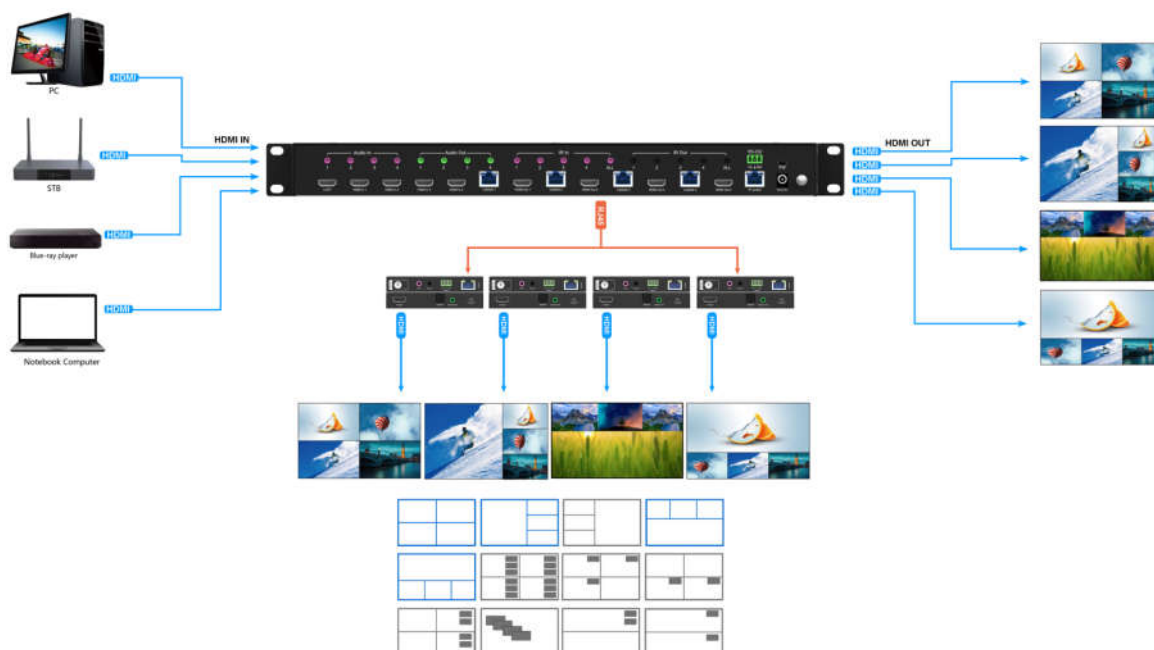

6. Input / Output Channel Key Operation


Channel	Button Method
OUT1-4	1. Directly press the number key, such as input channel 1, and select "1" to press (only when the output port is selected, the input channel number will be valid) 2. Long press means all outputs select current input
IN1-4	Directly press the number key, such as the output channel 2, press button "2" and press it again to cancel the selection; Long press to select all channels, and long press again to cancel
MENU	Function Button; Enter the function option or back to previous option
ENTER	Confirm Button: enter function selection mode
UP	Button for UP option
DOWN	Button for NEXT option
PRESET	Preset, short press to quickly enter the preset
LOCK	Long press to LOCK, Long press again to UNLOCK

7. Panel Control

7.1 Video

Signal switching includes 4 switching channels, which can be configured as input/output according to requirements to form a matrix of $1 \times 4 \sim 4 \times 4$. It can switch any input signal to the outputs

Operation format: "output channel" + "input channel"

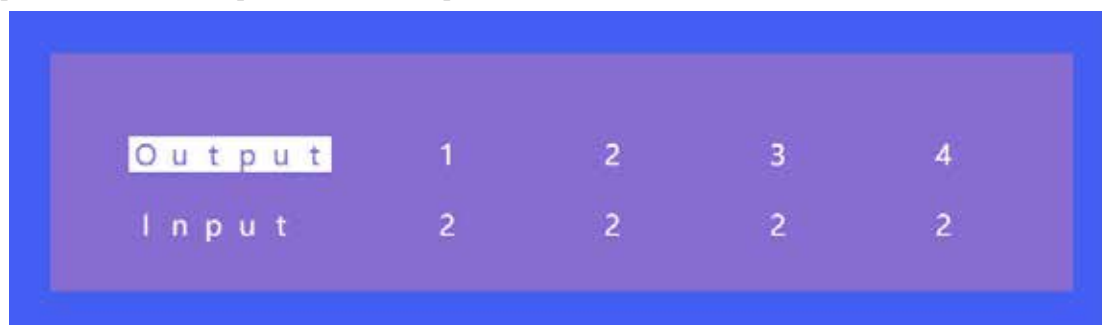

For example:

1. Switch output 1 to input 4 source

Operation: press "1" in Output area + "4" in IN area to complete the switch

2. Output 2, 1, 3 switch to input 2 source


Operation: press “2”, “1” and “3” in Output area + “2” in IN source area to complete the switch

3. Switch all outputs to input 4 source

Operation: Long press “4” in Output area + Short press “4” in IN area to complete the switch


7.2 Main Menu

Main menu is divided into 5 modules, which are Output, Input, Preset, Config, Info. Each module has multiple sub-menus that need to be set up accordingly.

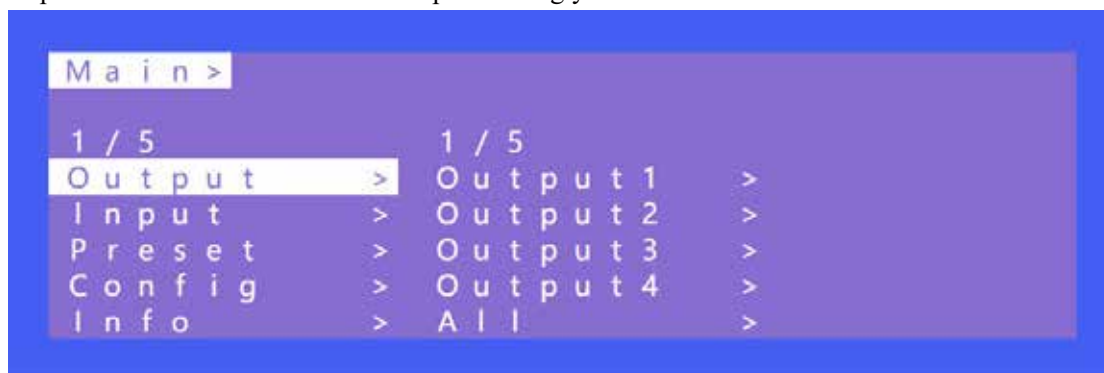

7.3 Output

There are 5 sub-menus in Output interface: output1~4 + all, which are used for individual or all output settings. Each channel contains 3 function items, which are video, audio and power.

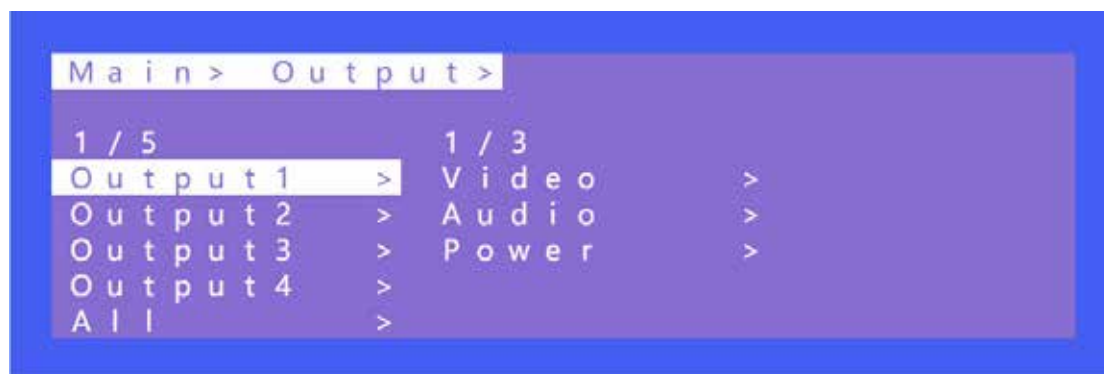

Choose a desired output before setting each video or audio.


There are 9 options in video: Source, Onoff, Pattern, Format, Genlock, Mirror, Coord, PIP, Image

There are 4 options in Audio: HDMI onoff, HDMI SRC, DEC onoff, DEC SRC.



1) Source

Any output can be switched to any one input, or all outputs can be switched to the same input; Default setting is PTP (Point to Point)

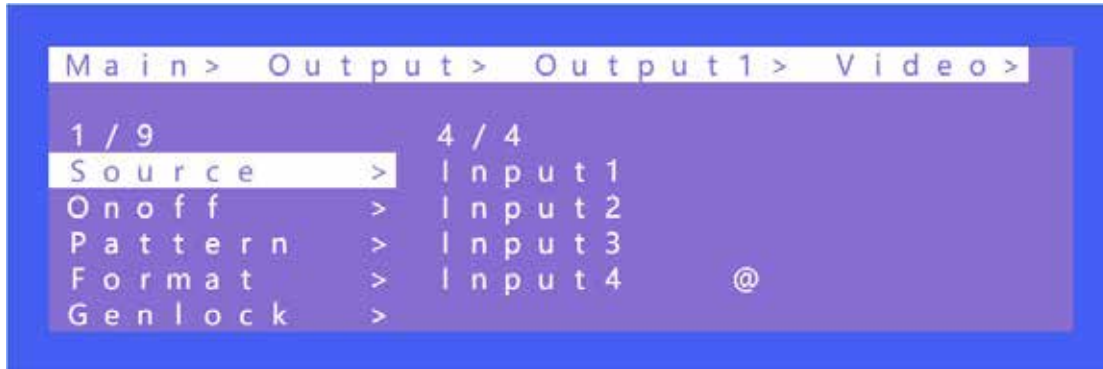
**2) Onoff**

Turn on/off one pr all of the outputs, the video of outputs are turned on by default.

**3) Pattern**

Built-in image of a matrix can be showed onto the TV by Pattern, which is mainly used for testing in special occasions.


For example: Using Cross or Cross1 images in 4x4 Video Wall mode can test whether each TV frame fits.

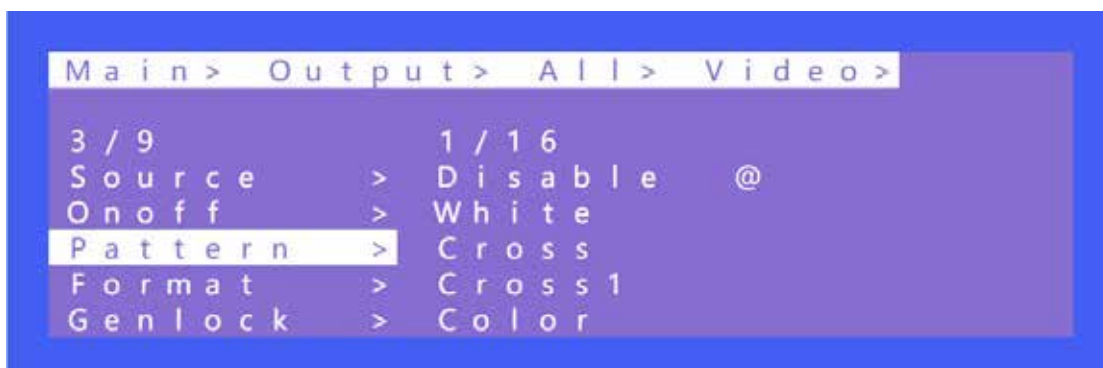**4) Format**

This function can set the output resolution format and force the output resolution format. But it does not provide upgraded image quality. Example:


The input is 1080P@60Hz and the output is set to 4K60Hz. Although the TV is displayed in 4K@60Hz format, it is actually in 1080P@60Hz.

Selecting input mode will enable following input resolution. Switching with matrix will not be seamless unless the resolution from the source is in the same format without HDR.

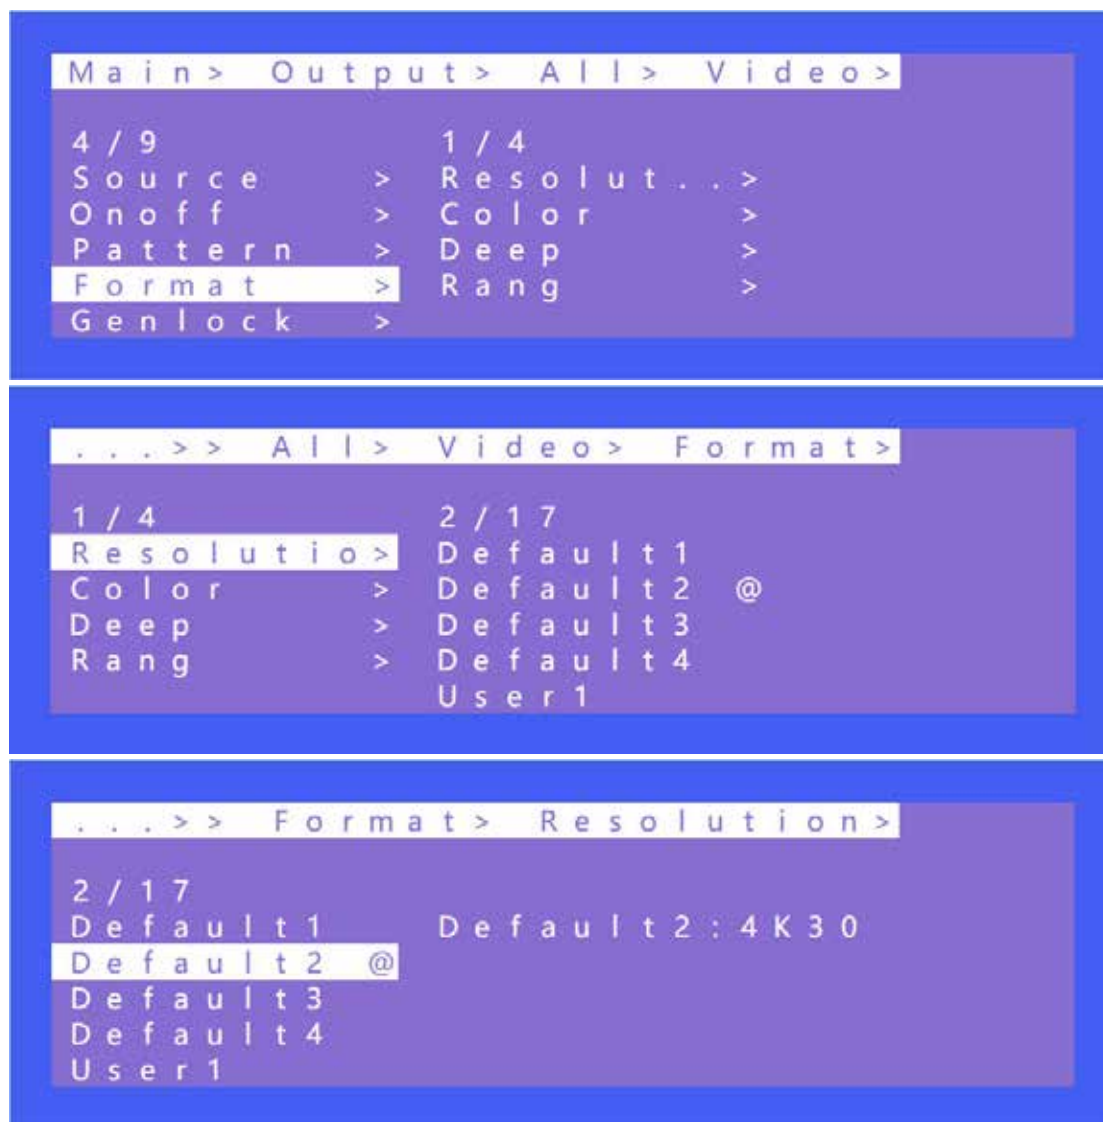

5) Genlock

Genlock is used to follow an output. Default Off. Output 1 is gray and cannot be selected. Only Output 2, Output 3 and Output 4 can be enable. Switching the following output resolution will effect other output images. (The image will be black for a while, and the resolution will be subject to the following output and cannot be changed.)

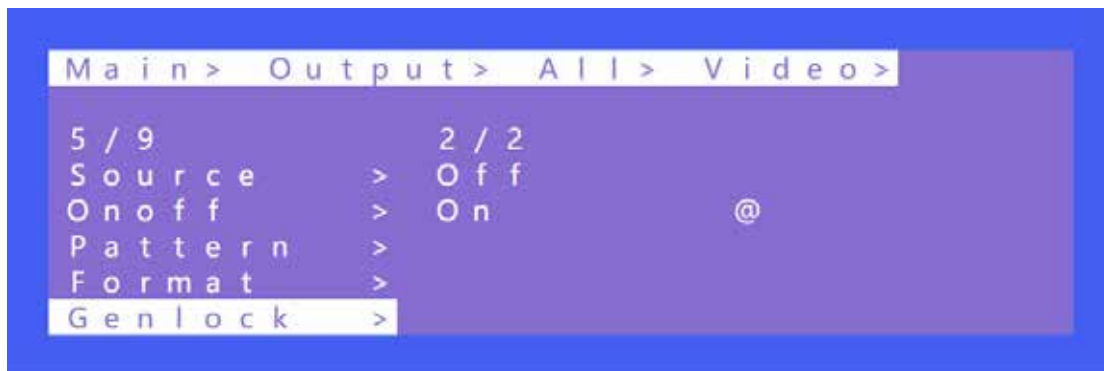

Operation:


- ① Select “Output” in the main menu and press “ENTER”
- ② Press “UP” or “DOWN” to select “ Output 1~4, all”
- ③ Click “ENTER” to enter the next sub-menu
- ④ Press “UP” or “DOWN” to select “Video”
- ⑤ Press “UP” or “DOWN” to select “Genlock”
- ⑥ Click “ENTER” to enter the next sub-menu
- ⑦ Press “UP” or “DOWN” to select “ Off” or “On” to complete the operation.


6) Mirror

This function can implement left and right mirror, up and down mirror. X indicates left and right mirror, Y indicates up and down mirror. The default is off.

There are 3 options including Crop, Zoom and Windows in the sub-menu, corresponding to crop and Zoom images respectively.

Windows represents the current window image

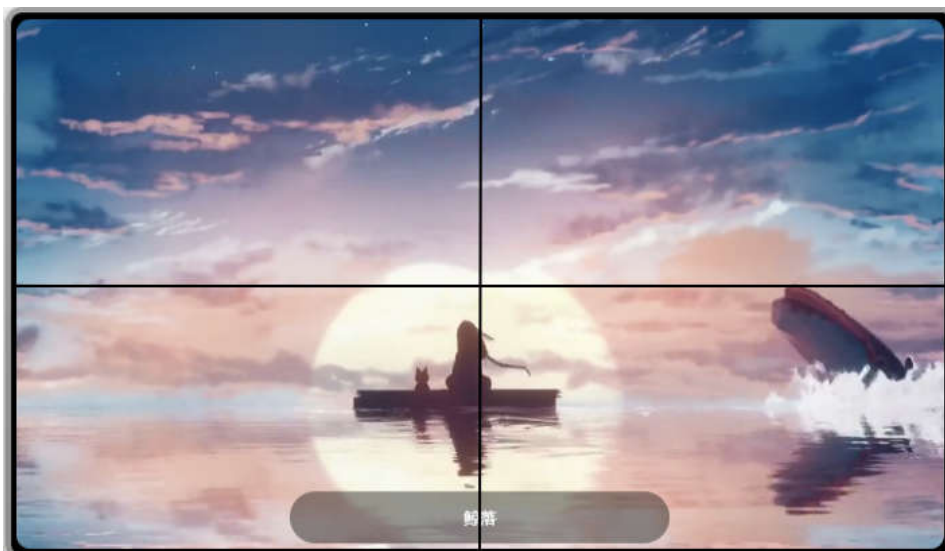

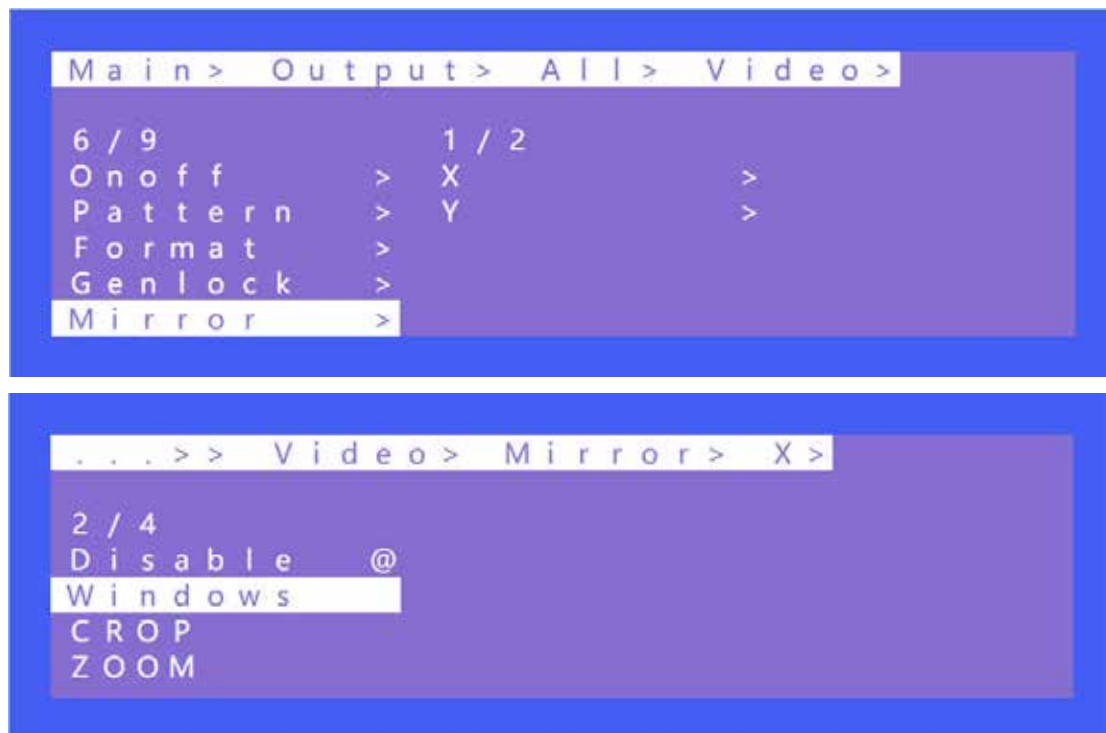

7) Coord

Coord is mainly used to set the coordinate parameters of the image. There are 3 types including Coord and Zoom and Gap, which are CROPX0, CROPY0, CROPX1, CROPY1, ZOOMX0, ZOOMY0, ZOOMX1, ZOOMY1, GapX, GapY and a total of 10 coordinate parameters.

The function can implement the parameter adjustment of multi-viewer and video wall.


The default start point of Coord : CROPX0 = 0, CROPY0 = 0.


The default end point of Crood: CROPX1 = 6000, CROPY1 = 6000.

The default start point of Zoom: ZoomX0 = 0, ZoomY0 = 0

The default end point of Zoom: ZoomX1 = 6000, ZoomY1 = 6000

The default start point of GapX=0, GapY=0

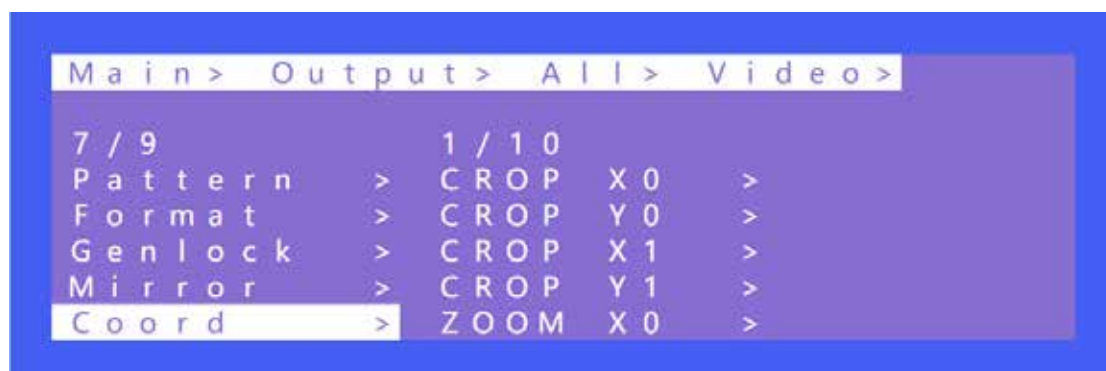

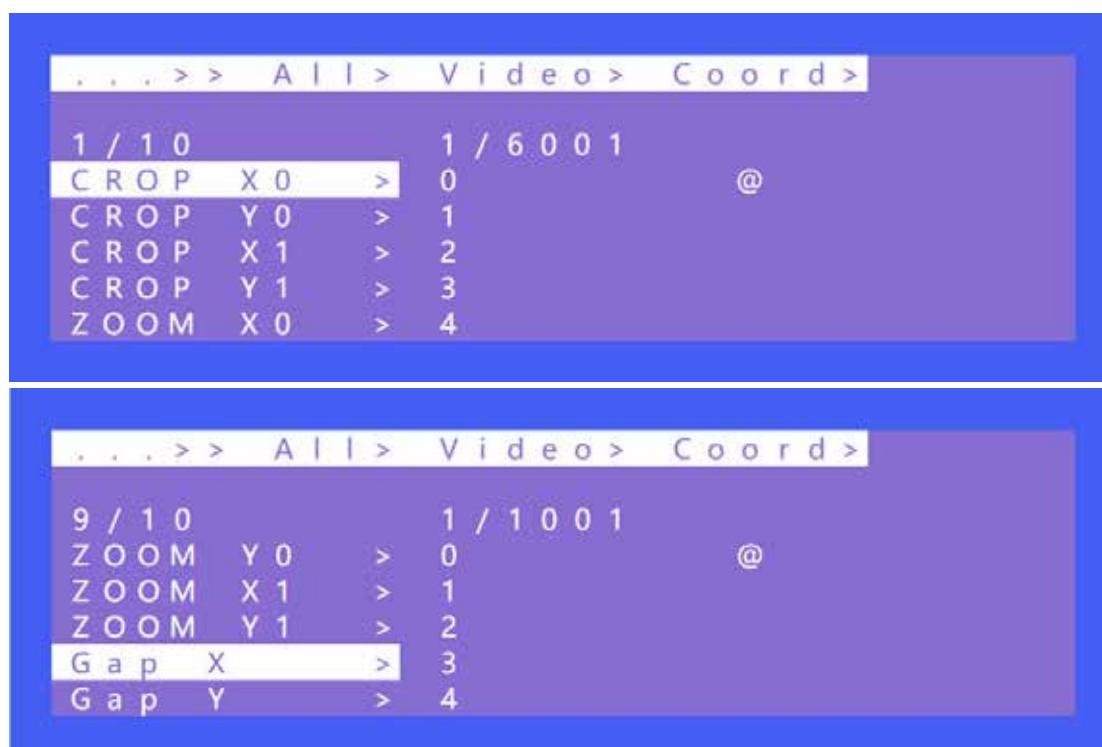


8) PIP

PIP is mainly used for the layer priority. By default, each output has 4 layers. It can change the sequence of the layers in multi-viewer mode. Each layer can choose an output. You can turn on/off this function by Status.

Alpha can adjust the transparency between layers

Remarks: One layer can select only one output, cannot select it repeatedly, otherwise it does not take effect.



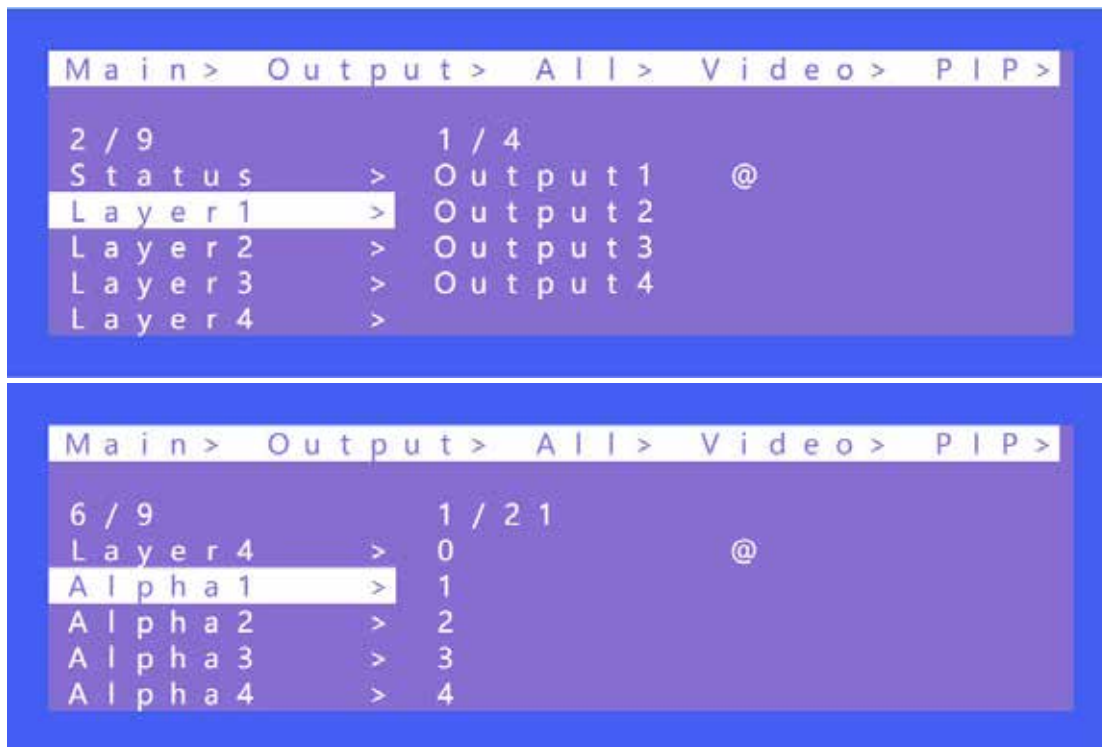

9) Image

Image is used to set the parameters of output image. There are 4 parameters: Brightness, Contrast, Saturation, Hue

Parameter Ranges from 0 to 100 and it is 50 by default.




7.4 Audio

There are 4 function options in Audio: HDMI Onoff, HDMI SRC, DEC Onoff, DECSRC. It can implement audio switching independently, turn off HDMI audio output and audio De-embedding as well as Audio De-embedding switch to another source.



1) HDMI onoff

HDMI onoff can implement on-off of HDMI output audio. Video will be displayed on TV without audio when turn off the audio.

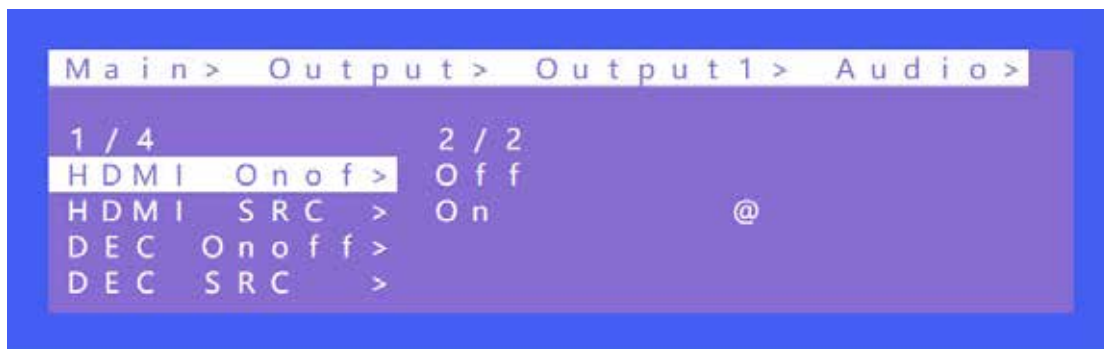

2) HDMI SRC

HDMI SRC enables switching to different input signal sources. It supports switching to analog audio in 1~4, HDMI input1~4.

Auto HDMI indicates following the corresponding input.

Auto ENC indicates the corresponding audio in, that is, audio follow the matrix input's switch, not switch other audio source.

Auto HDMI is default.




3) DEC onoff

DEC on/off can implement the audio on/off. Click "On" to turn on the audio, click "Off" to turn off the audio. It is **ON** by default.



4) DEC SRC

DEC SRC enables that the audio extracts to different input source, which can switch to HDMI input 1~4. Auto HDMI indicates that it follows the corresponding input. The default is Auto HDMI.

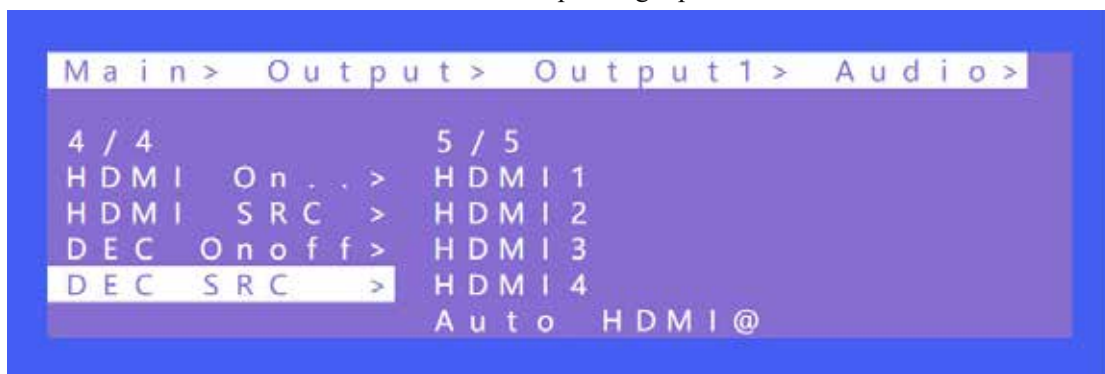

7.5 Power

Power is used to turn off HDMI output of 5V. It is different from “Onoff” as there is a blue screen displayed on TV while selecting “off” in “Onoff”. Image will completely turn off after selecting “Off” in “Power”. It is on by default.




7.6 Input

There are three functions options in Input interface, which are Video, Audio and EDID.


Video is used to provide the switch channel, built-in Pattern switch. Audio is used to set the delay.

EDID supports built-in, copy, user and temp.

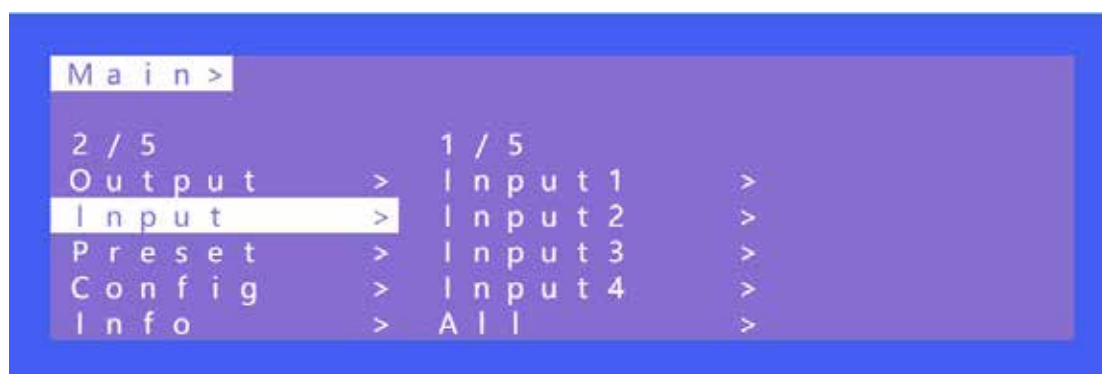

1) Video

Video can implement the on-off of input channel. All the outputs correspond to the input will have no image and audio when this input is set to “Off”. Pattern provides built-in pattern, the selected built-in pattern will replace the input source image.

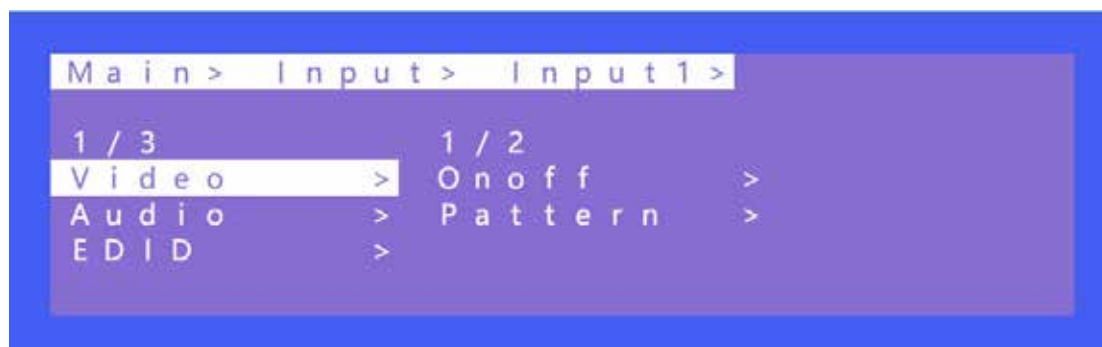

2) Audio

Audio delay setting range (0~50, auto) , the default is auto.




3) EDID

There are 4 options including built-in EDID, User EDID, Copy HDMI EDID, temp, each input EDID can be set. The default setting is default1

After copying the TV EDID, the audio parameter is automatically changed to LPCM2.0.

Default1	4K60 444-LPCM: 2.0-192Khz	Default2	4K60 420-LPCM: 2.0-192Khz
Default3	4K30 444-LPCM: 2.0-192Khz	Default4	1080P120 444-LPCM: 2.0-192Khz

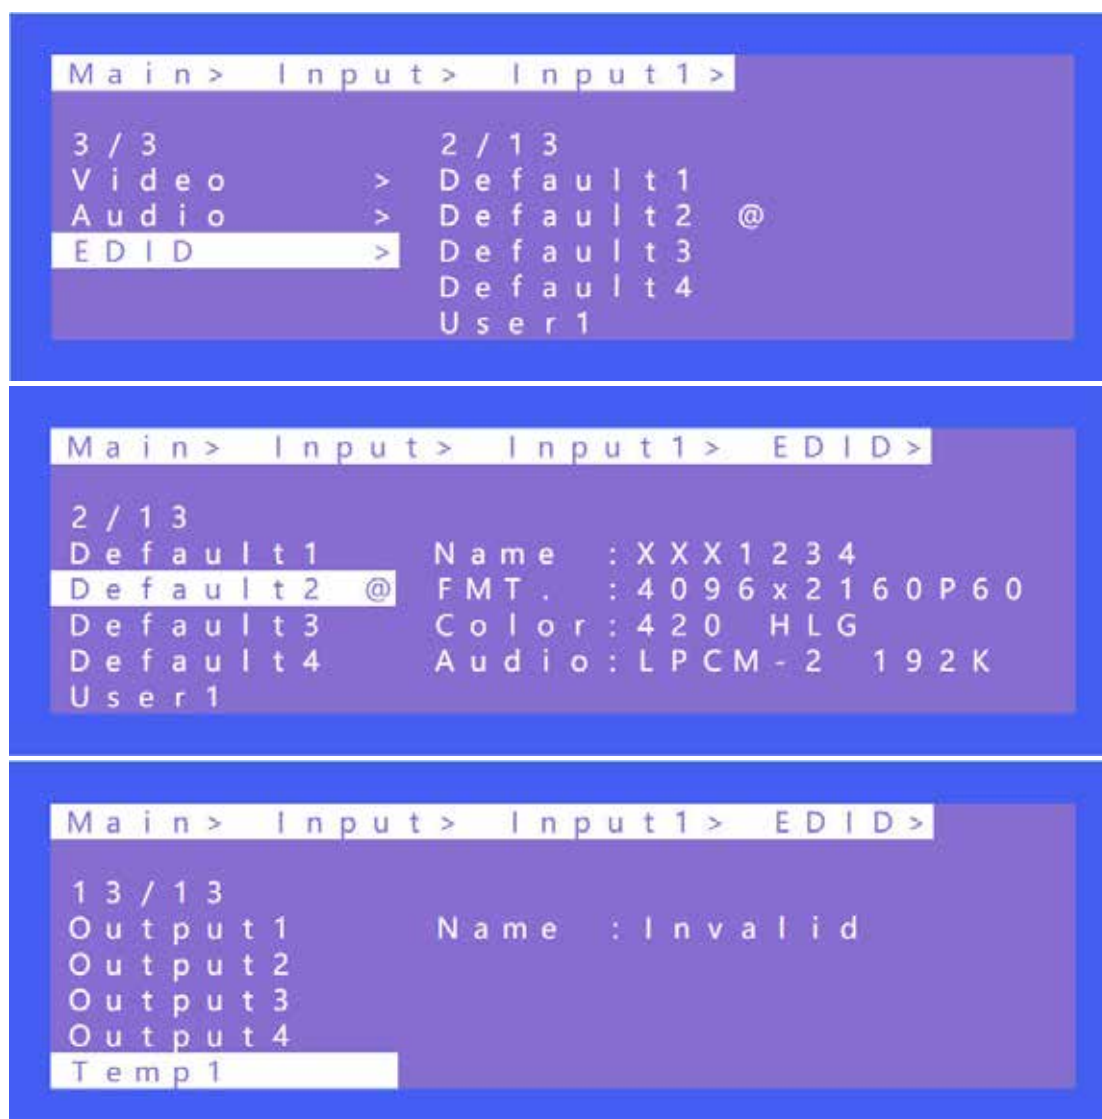

Switching the Default1 to input1 as shown in the following example:

Operations:

- ① Select "EDID" in the main menu and press "ENTER"
- ② Press "UP" or "DOWN" to select "Input 1"(the fifth option indicates that select all input)
- ③ Click "ENTER" to enter the next sub-menu
- ④ Press "Default1" to complete the operation
- ⑤ The selected EDID will show some of its information (resolution, audio format and audio channel)

7.7 Preset


Preset can save the current video, audio, EDID and system settings, supports 8 different scenes. Preset can be modified and called using WEB, commands and panel. The default preset is consistent with its factory settings. There are 4 options as follow:

Clear: Remove the selected preset.

Save: Stores the current preset (can be covered).

Call: Activates the currently selected preset.

Demo: Plays the demo according to the scenes sequence.

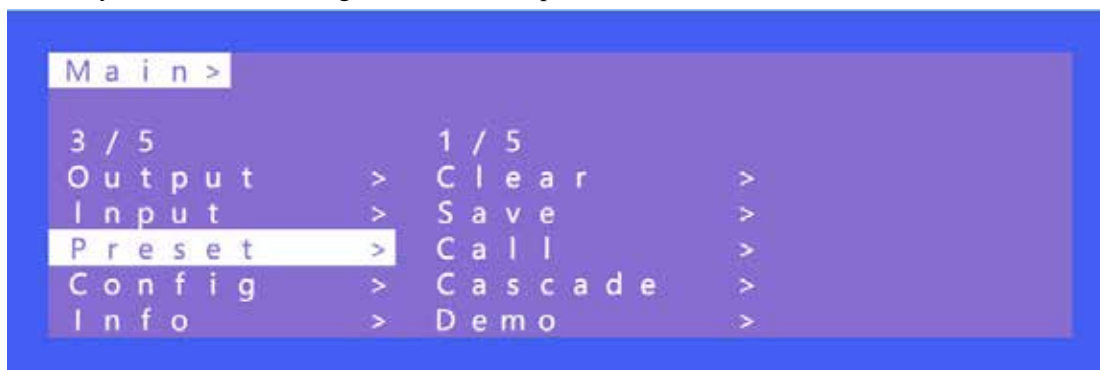

Operations:

- ① Select “Preset” in the main menu and short press “ENTER” to enter the preset interface. Call indicates calling preset, Save indicates saving preset, Clean indicates cleaning preset.
- ② Save preset: select “Save” in Preset and select “Mode” or “Scene” to save in “Scene” or “P2P”
- ③ Call preset: Select “Call” in Preset, the select a saved preset to complete the operation. Current scene is the saved preset scene
- ④ Clear preset: Select “Clear” in Preset, select a saved scene to complete the operation. The saved preset scenes are restored to their default values.


For example:

Save: Preset+Save+Scene+Scene1

Call: Preset+Call+Scene+Preset1

Clear: Preset+Clear+Scene+Preset 1



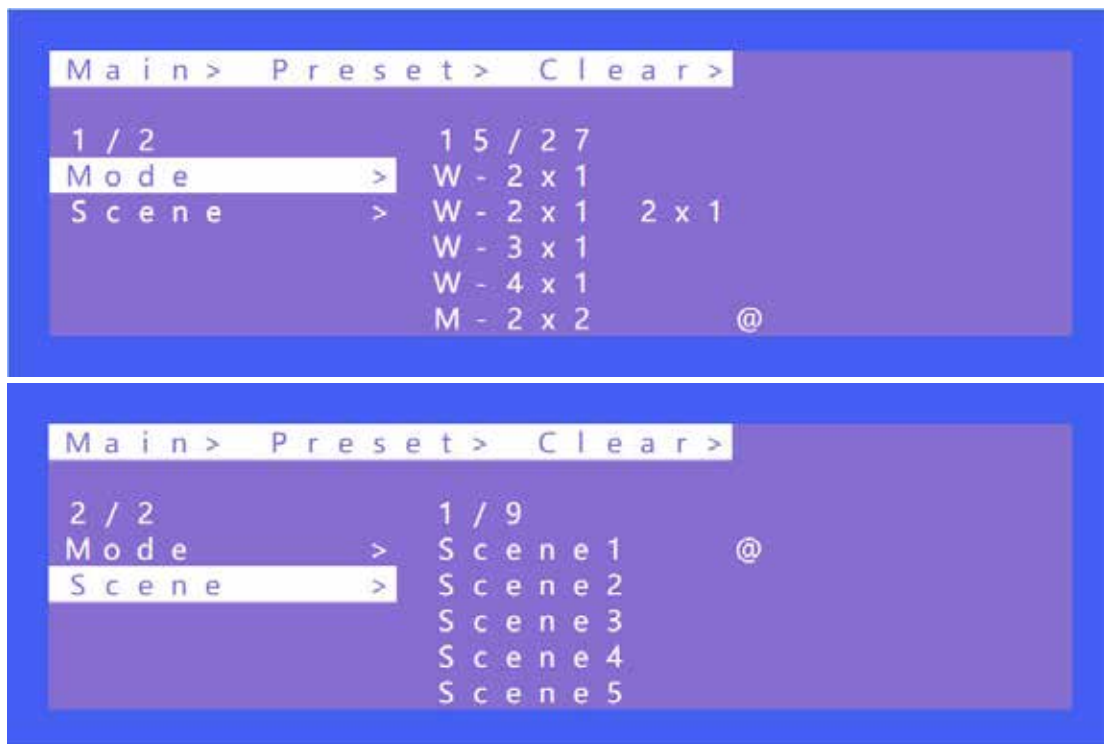

Cascade Video Wall:


It is used to set the position of the video wall in accordance with the silkscreen marking order of the matrix. You can determine the actual TV location based on the OSD on the TV.

H_NUM indicates the horizontal number of paring walls.

V_NUM indicates the vertical number of paring walls.

Numbering: it indicates that the matrix is currently in the cascading position.

(Up to 5 matrix cascades are supported)

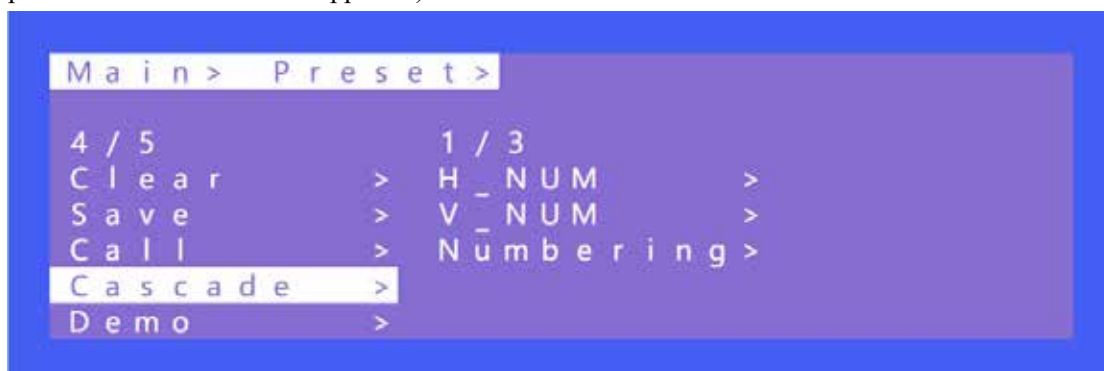

Instructions for operation:

Each matrix is set to the same number of horizontal and vertical concatenations. Then set the Numbering of the Matrix (numbering can't be repeatable). Then connect to the corresponding TV wall according to the output order (the output order must be corresponding).

Such as:

Splicing a horizontal 2, vertical 3 video wall,

Matrix 1's output 1~4 connected to TV 1~4, the loop out of matrix 1 connected to matrix 2's input;


Matrix 2's outputs 1~2 connected to TV 5~6.

A 2x3 video wall is generated

Demo operation:

Timer can set the rotation time, the default is "Endless", the minimum time is 3 seconds.


Select indicates if need to perform the scenario in rotation. If this parameter set to yes, the scenario will be played. If this parameter is not set to yes, the scenario will be skipped.

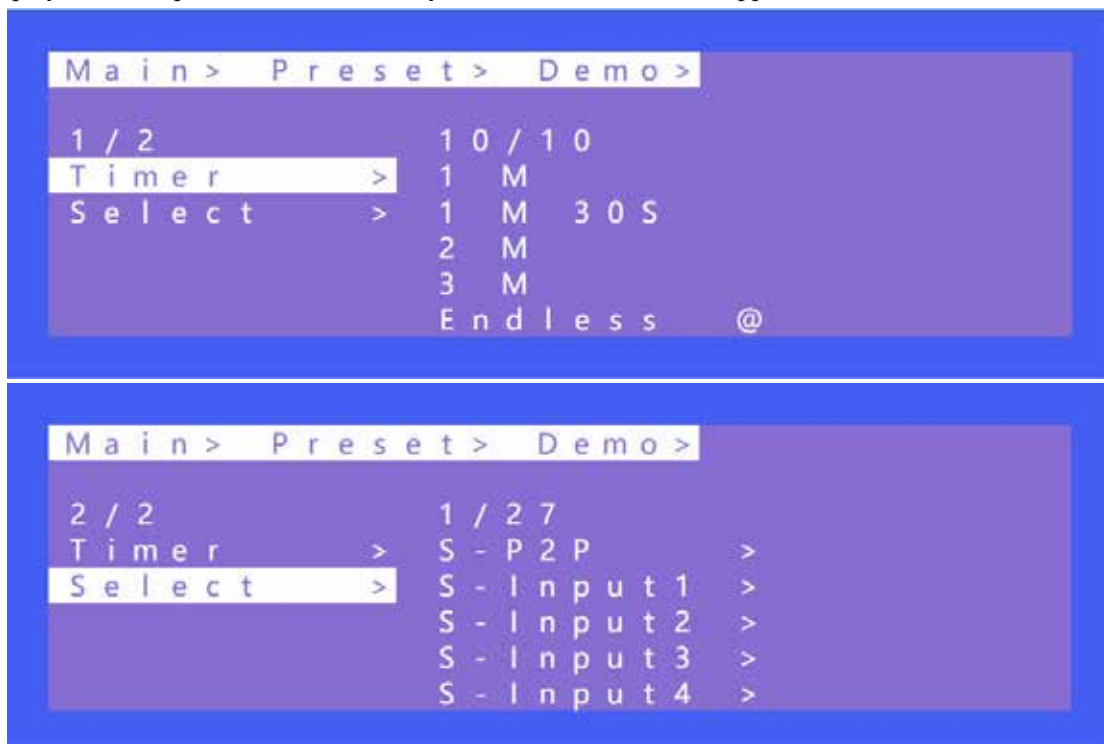

7.8 Config

Config can set network, RS232, LCD, OSD, MENU, user EDID, system.

Gray sections cannot be selected.

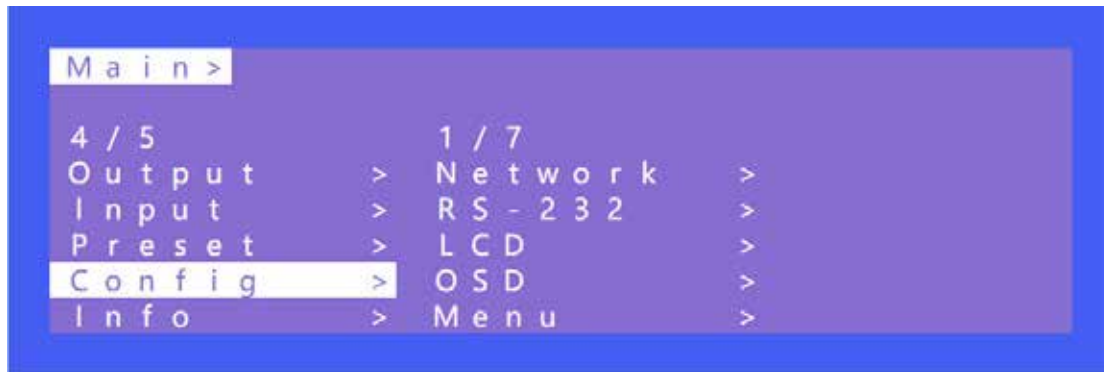

1) Network Setting


Network can set DHCP, IP, Mask, Gateway, Port and Mac. The Mac address cannot be changed.

The default IP address is 192.168.1.168

TCP/UDP protocol, default port: TCP5000, UDP 5001

Baud Rate: 115200

Telnet: 23

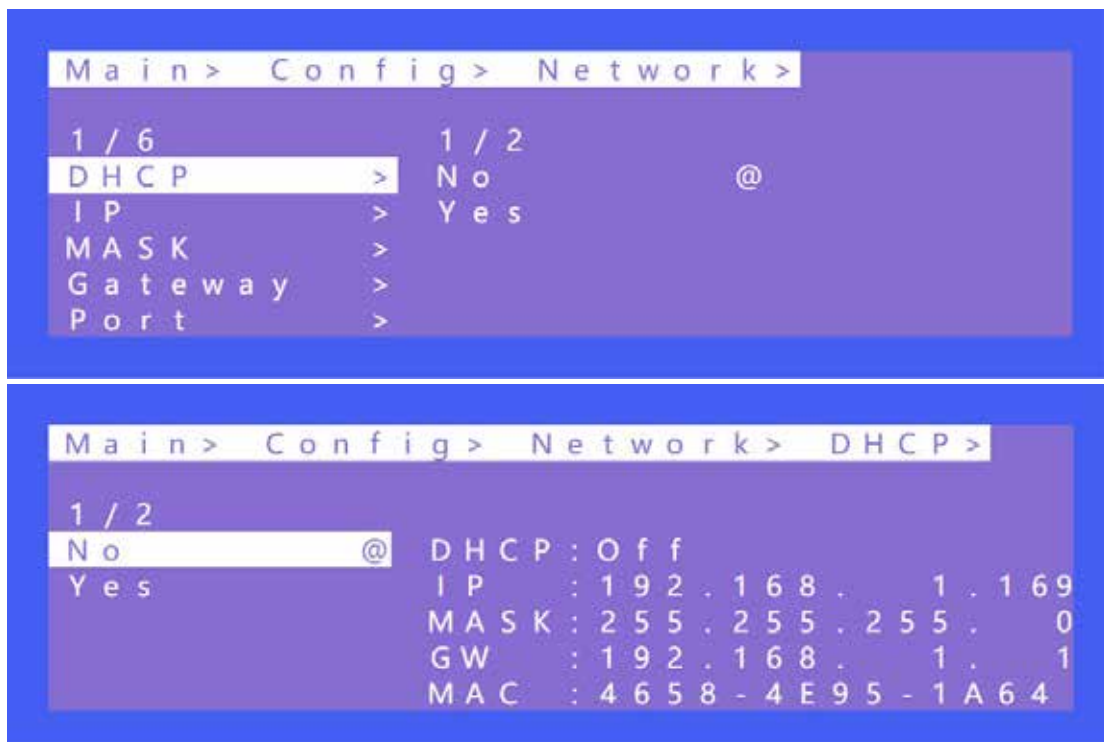


```
Main> Config> Network>
```

```
2 / 6      1 / 4
DHCP      > Part 1      >
IP        > Part 2      >
MASK      > Part 3      >
Gateway   > Part 4      >
Port      >
```

```
Main> Config> Network> IP>
```

```
1 / 4      193 / 256
Part 1     > 188
Part 2     > 189
Part 3     > 190
Part 4     > 191
           > 192 @
```

```
Main> Config> Network> Port>
```

```
1 / 2      5000 / 65534
TCP        > 5000 @
UDP        > 5001
           5002
           5003
           5004
```

```
...>> Network> Port> TCP>
```

```
5000 / 65534
5000 @ DHCP: Off
5001 IP : 192 . 168 . 0 . 57
5002 MASK : 255 . 255 . 255 . 0
5003 GW : 192 . 168 . 0 . 1
5004 MAC : 4658 - 4E9E - 0A6B
```


Operation of TCP/UDP port number change

- ① Select “Config” in the main menu and press “ENTER”
- ② Press “UP” or “DOWN” to select “ network ”
- ③ Click “ENTER” to enter the next sub-menu
- ④ Press “UP” or “DOWN” to select baud rate “Port” to enter the next sub-menu

- ⑤ Select “UDP” or “TCP”
- ⑥ Press “UP” or “DOWN” to select “1~65534” to complete the operation.

2) RS-232

Data, Stop, and Parity parameters cannot be changed by default.

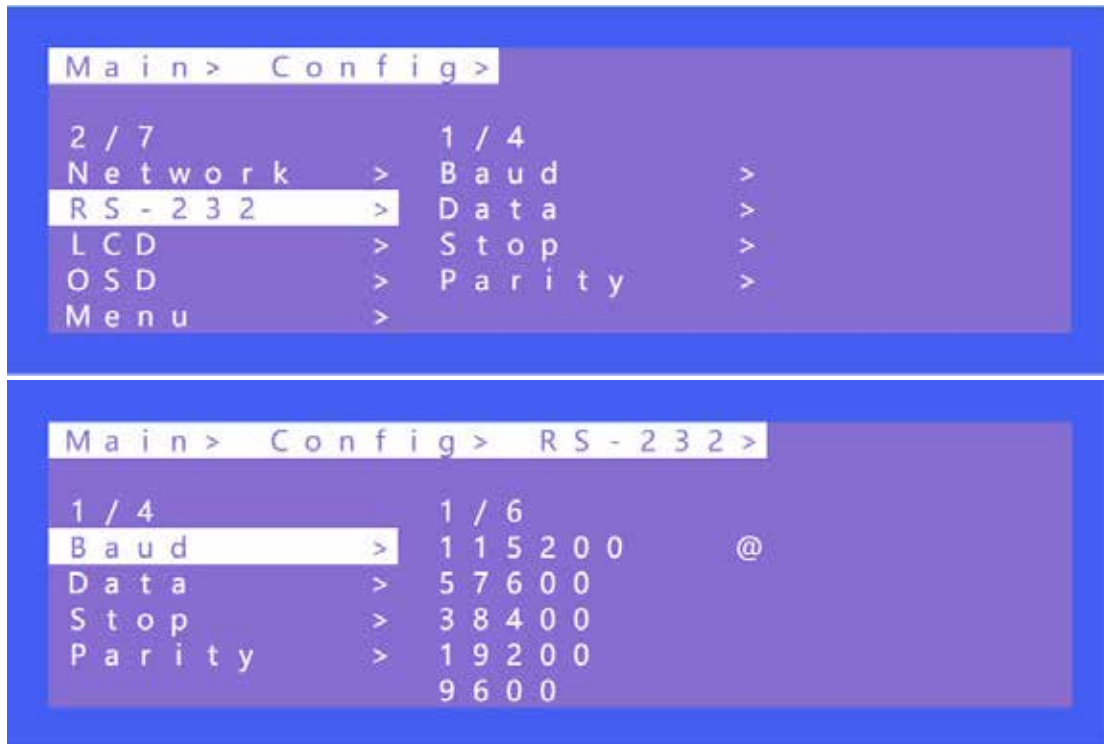


3) LCD

Bright can adjust the brightness of the LCD screen, and Timer can set the backlight time. The default backlight level is 8 and the time is 30 seconds.

Bright 0 to 8 indicates the backlight level, and 0 indicates off.

Timer can be set to 3 seconds ~ Endless.



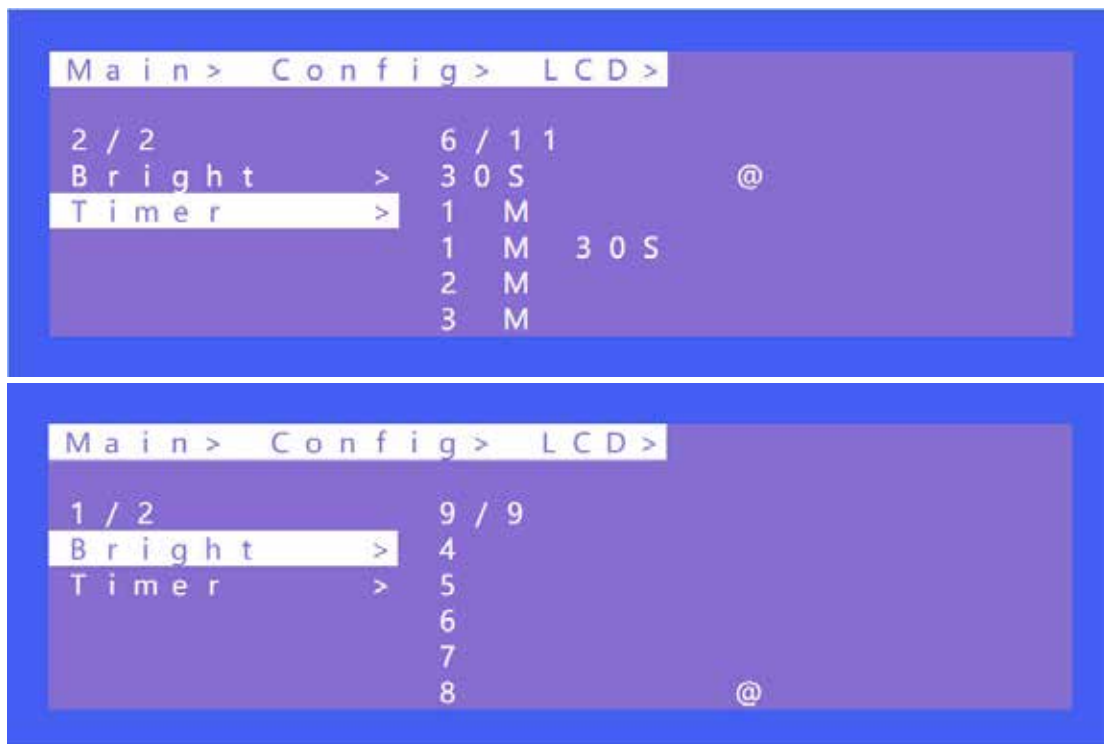

4) OSD Setting

There are 4 options in OSD: User, Time, Menu, Info.

User indicates the output coordinate time of OSD.

Time indicates the running time after the device is powered on.

Menu indicates that the LCD is mapped to the TV.

INFO indicates the displayed time of audio and video information.

When the parameter is set to 0 seconds, OSD display is turned off. By default, User and time are endless, menu and INFO are 30 seconds



5) Menu

Timer indicates the time of menu returns to the channel. Default 30s.

Select Run indicates whether the confirm button of the last sub-menu is enabled.

If it is set to disable, you need to press "ENTER". If it is set to enable, you do not need to press "ENTER"

```

Main> Config>
5 / 7          1 / 2
Network      > Timer      >
RS - 232    > SelectRun>
LCD         >
OSD        >
Menu       >

```

```

Main> Config> Menu>
1 / 2          10 / 10
Timer      > 1 M
SelectRun> 1 M 30 S
           2 M
           3 M
           Endless @

```

```

Main> Config> Menu>
2 / 2          2 / 2
Timer      > Disable
SelectRun> Enable @

```

6) User EDID

User EDID can store the EDID of the output display device of the connection matrix to user1~4, which can be stored in default, output, and temp1, and then used in the EDID list.


```

Main> Config>
6 / 7          1 / 5
LCD           > User 1      >
OSD           > User 2      >
Menu          > User 3      >
User EDID>   User 4      >
System       > All         >

```


7) System

System Setting includes reboot, Power, and Factory. Reboot indicates device restart, power indicates device sleep, and factory indicates factory data reset.

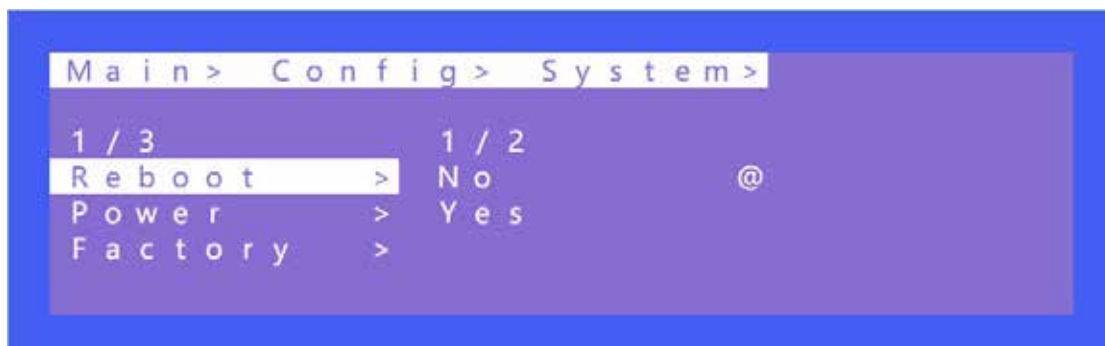

Timed Off

Timed Off indicates timed standby, Timed On indicates timed wake up, and Auto Sleep

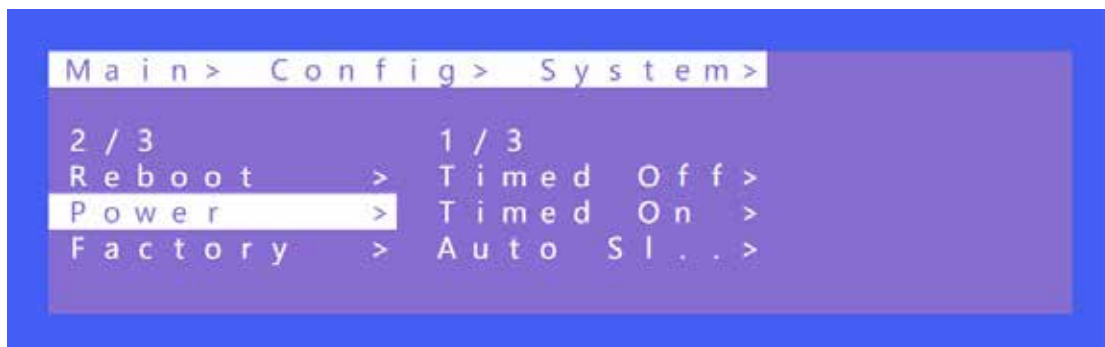

Factory

Simple: Partially restores factory settings

User: Restores all factory settings



7.9 Info


Query device information, including input, output, system, and log. The information can only be queried and cannot be set or changed.

Input: resolution information of the signal sources input







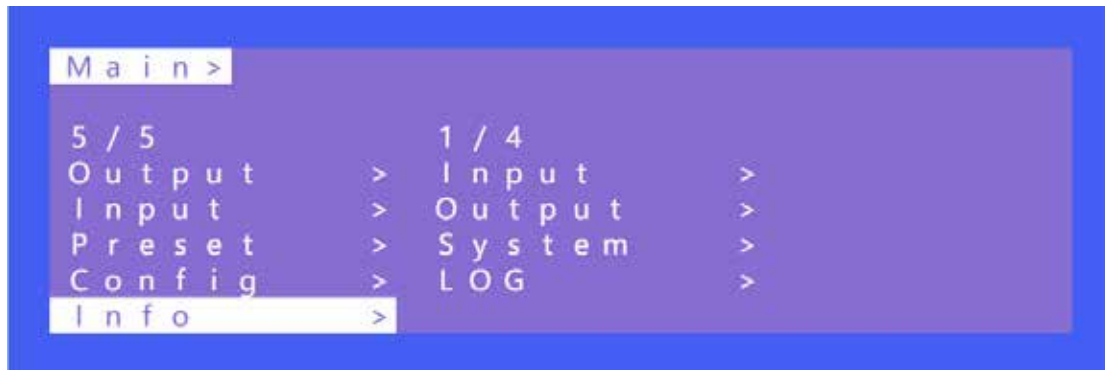













Output: EDID information of the TV of outputs.

System: System information includes Web, version and company info.

Log: Matrix log



8. Remote Control

- : Standby or power on
- : Mute button
- : Return to upper level
- : Move to next level
- : Picture off
- : Page turn by 100 of the last sub-menu
- : Page turn by 10 of the last sub-menu
- : Menu
- : All output
- : Up
- : Menu
- : OK
- : Enter
- : Down
- : Return or exit
- : Menu
- : When selecting Output, means Out1--out4
When selecting Input, means In1--In4
- : Preset
- : (N/A)
- : Point to Point 1-1, 2-2, 3-3, 4-4



9. Audio Extraction

9.1 HDMI audio


Default HDMI audio output support uncompressed audio PCM, LPCM2.0.

The maximum sampling rate support 192KHZ

COPY EDID audio format are forced into LPCM2.0.

HDMI Source:

- ① ENC1~4 indicates that HDMI outputs select the embedding audio
- ② HDMI1~4 indicates that HDMI outputs select other audio source
- ③ Auto HDMI indicates that the input signal source is switched with the matrix, but the audio state is not switched
- ④ Auto ENC indicates the HDMI sound will be overwritten and replaced with the corresponding embedded audio

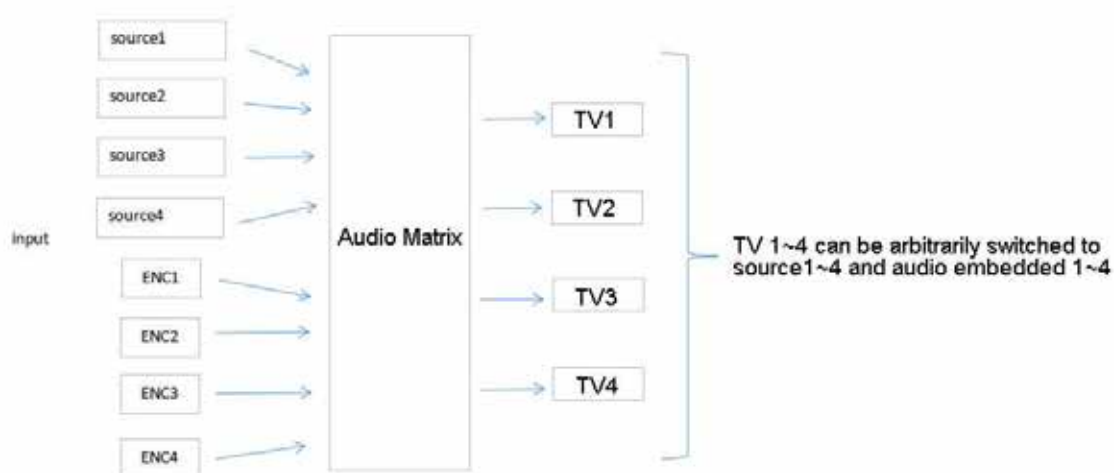


9.2 Audio Extraction

*Corresponding to the front end, the current channel can only select one audio each time



1) Analog Audio

- ① HDMI 1~4 indicates that HDMI output audio select audio from other input signal sources
- ② Auto HDMI indicates that follow with the HDMI Matrix Switching.

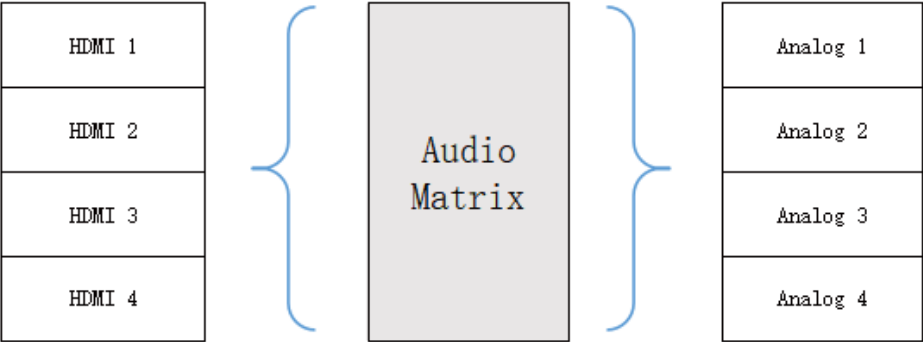

10. RS232 Control




10.1 Open CommUart Assistant.

10.2 Comport setting:

Choose correct COM port that connect to PC in parameter configuration area.

Serial Port Default Settings	
Baud Rate	115200 bps(Default)
Parity Bits	None
Data Bits	8
Stop Bits	1

10.3 Enter Port Command in Send options.

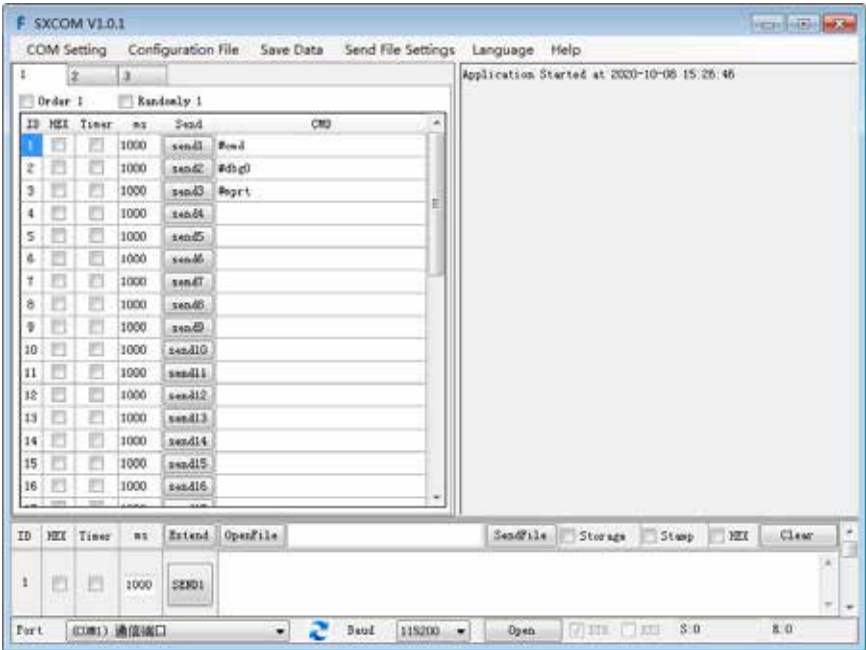

10.4 Command List


- 1).All commands start with “#”
- 2).“_” the underline cannot omit.
- 3) Command head, Parameter and target need to add one “SPACE”.
- 4) Out can be followed by multiple digits, separated by commas (.). For example, "#video_d out3,2,1 source=3"

The following table is only an example.Please refer to the list of instructions.


Type	Format	Value	Regulation
Command head	#cmd	without	
Explain	Can be used to search command,after receiving command, the system will feedback all open command format fields		
Example1	#cmd		
	Search all open command		

11. Scene Instructions


11.1 Video Wall Mode

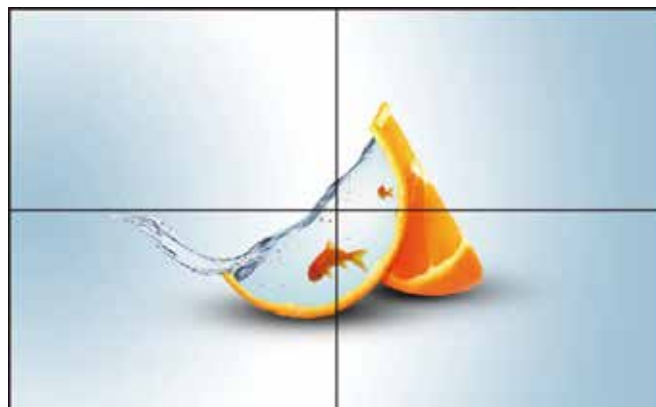

W-2x2: 2 Vertical x 2 Horizontal

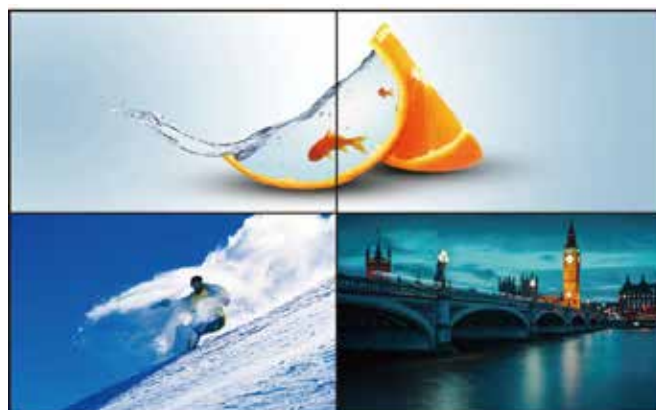

W-1x2: 1 Vertical x 2 Horizontal

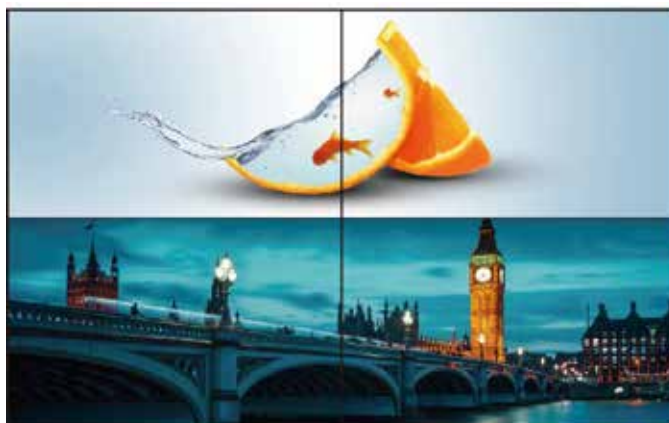

W-1x2 1x2: 1 Vertical x 2 Horizontal




W-1x3: 1 Vertical x 3 Horizontal




W-1x4: 1 Vertical x 4 Horizontal




W-2x1: 2 Vertical x 1 Horizontal

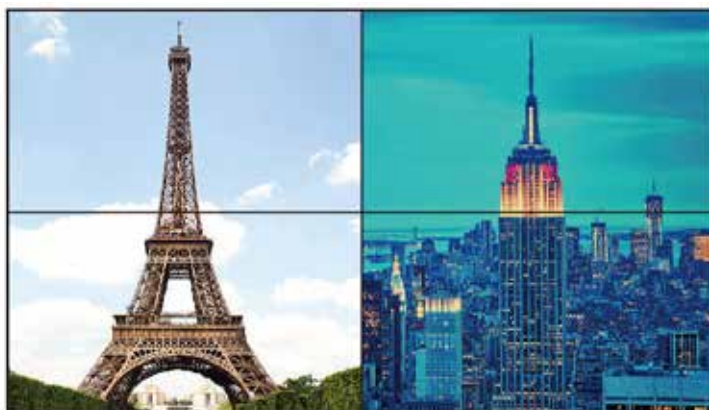

W-2x1 W-2x1: 2 Vertical x 1 Horizontal

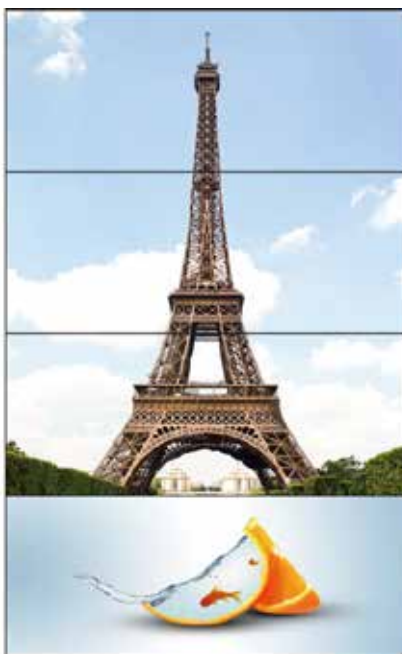

W-3x1: 3 Vertical x 1 Horizontal

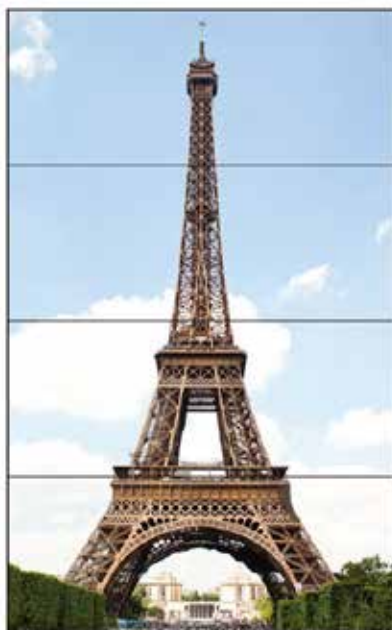

W-4x1: 4 Vertical x 1 horizontal

11.2 Multi-Viewer Mode



M-2x2



M-3x1-R




M-3x1-L




M-3x1-U




M-3x1-D

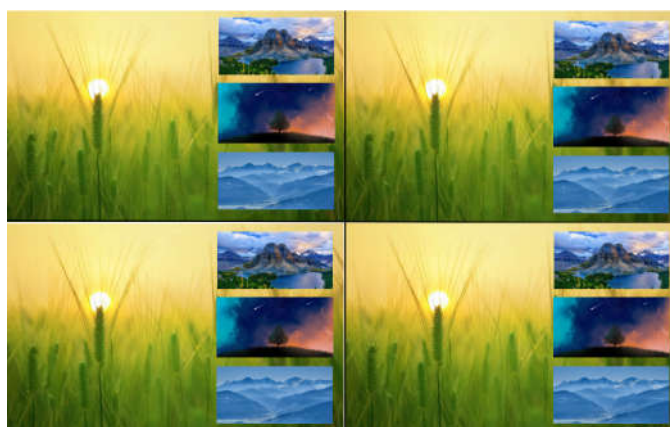


M-1+234 A

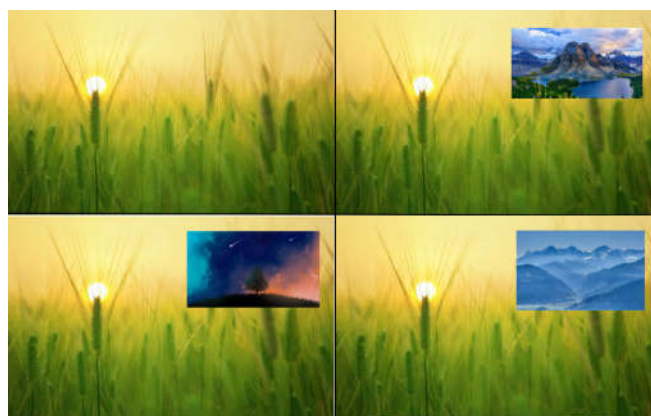

M-1+2 1+3 1+4 A

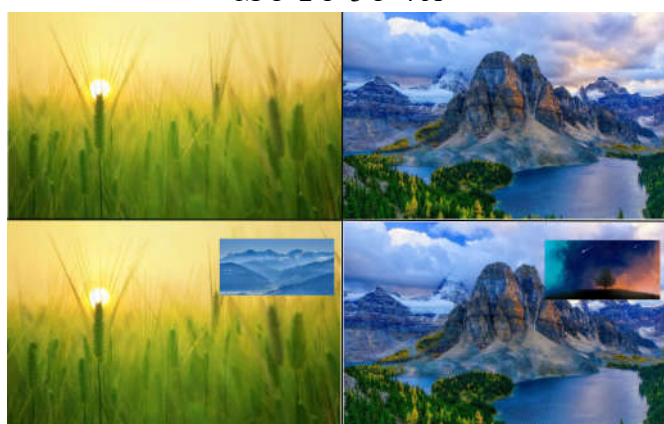

M-1+2 3+4 A

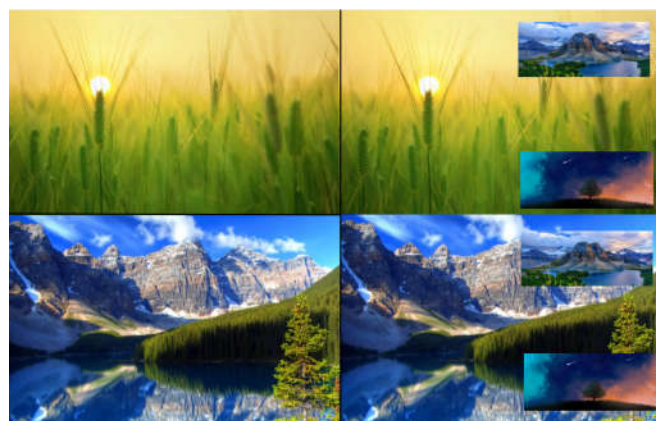

M-1+34 2+34 A



M-POP A



M-2x1+34 A



M-2x1+3 2x1+4 A


11.3 Image cropping and TV coordinate change

Input starting point: CROP X0(0), CROP Y (0),

Input ending point: CROP X1(3000), CROP Y0(3000)

Input scaling starting point: ZOOM X0(0), ZOOM Y0(0),

Input scaling ending point: ZOOM X1(6000), ZOOM Y0(6000)

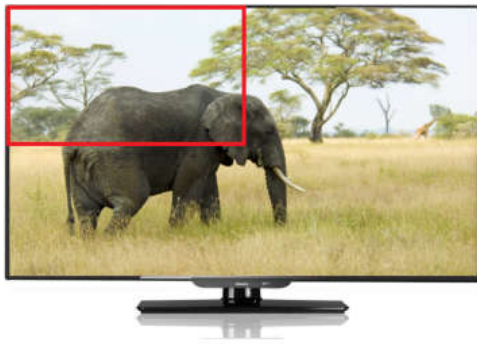

Before cropping




After cropping

11.4 Cascading

Cascading Video Wall: need to use multiple matrices, all the matrices needs set to the same number of video wall; Then the matrix follows 1~2~3 respectively connected to the TV wall

See below picture:

Such as a 3x3 video wall; Matrix1 connects to TV 1 to 4, Matrix2 connects to TV 5 to 8, Matrix3 connects to TV 9, the front matrix loops out to connect to the next matrix's input 1

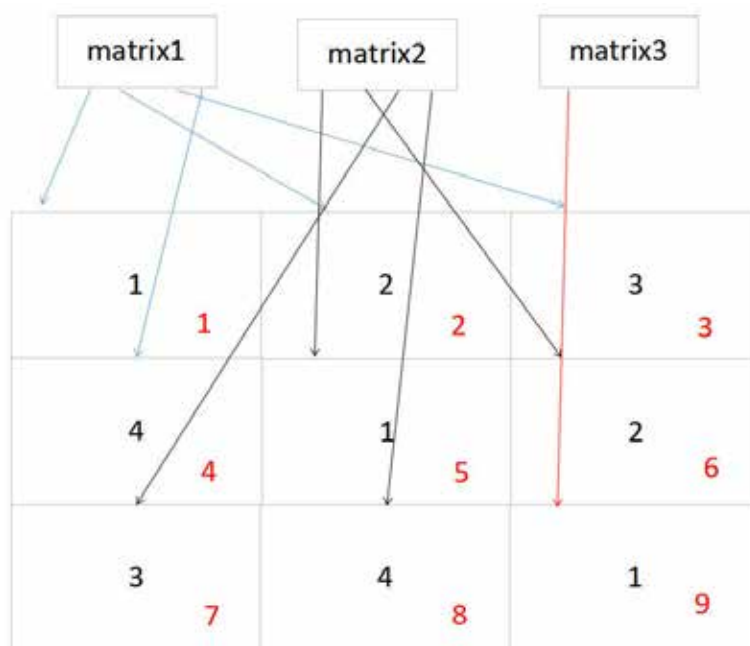

***The black number is the output order of the matrix, and the red is the position of the TV wall


12. Web Control

12.1 Change IP address of PC

Before configuring the device through the website, it is necessary to configure the IP address of the computer configured with the device

(mainly to ensure that the computer and the device are set in the same network segment).

- 1). Open the network control center and set the computer's IP address:
- 2). Choose to use Static IP, with the IP address set to 192.168.1.x (x ranges from 0 to 254, but cannot be consistent with the device's IP address),
- 3). Subnet mask set to 255.255.255.0
- 4). Gateway set to 192.168.1.1

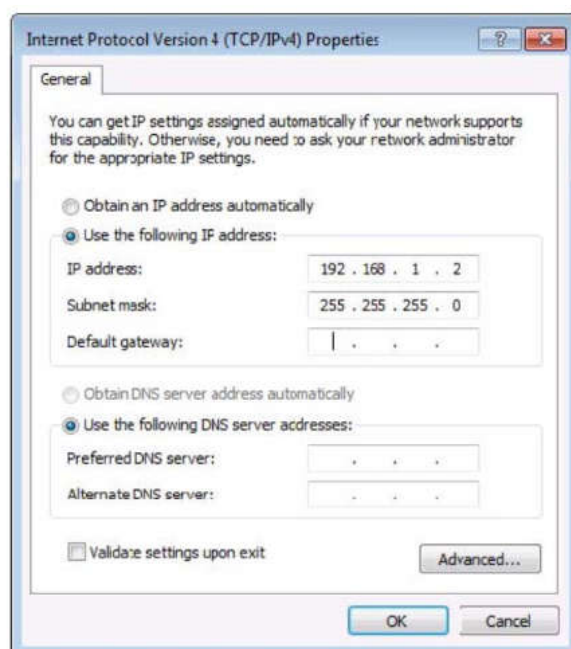


12.2 Log in by browser

Default IP address for log-in: 192.168.1.168

Type in user name and password (default user and default password: admin)

Note: suggest to use newer version of Google, Firefox, IE11 browser for better compatibility.

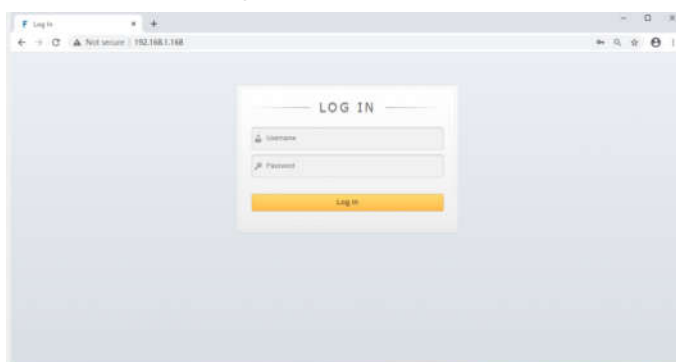

13. WEB

13.1 Status

- 1) In the Status interface, you can view the matrix information
- 2) Input INFO displays the resolution, audio and HDCP information of the input signal source
- 3) Output EDID Info interface will display partial EDID information of TV
- 4) Device Info displays MCU version and web version

Status	Input Info				
Input	Connected	Resolution	Color	Audio	HDCP
Output	In1	x	x	x	x
Matrix	In2	x	x	x	x
Preset	In3	x	x	x	x
Advanced	In4	x	x	x	x
System	Output EDID Info				
	Connected	Resolution	Color	Audio	Product
	Out1	✓	1920×1080P 60	444 None	ERR-1 None
	Out2	x	x	x	x
	Out3	x	x	x	x
	Out4	x	x	x	x
	Device Info				
	MCU Version:		V0.2.6		
	HTML Version:		V0.0.8		

13.2 Input Menu

- 1) Rename: The input name can be changed by double-clicking input1~4.
- 2) Video: Click the green buttons to enable or disable the video inputs.
- 3) Audio delay: The default is Auto, click “-” or “+” to adjust.
- 4) Copy EDID: Default1 ~4, user1~4, output1~4, temp1 can be switched to the inputs

Status	Input	Rename	Video	Audio Delay	Copy EDID From
Input	In1	Input1	<input checked="" type="checkbox"/>	- Auto +	Default1:4096x2160P@60-444 HDR.HLG ▾
Output	In2	Input2	<input checked="" type="checkbox"/>	- Auto +	Default1:4096x2160P@60-444 HDR.HLG ▾
Matrix	In3	Input3	<input checked="" type="checkbox"/>	- Auto +	Default1:4096x2160P@60-444 HDR.HLG ▾
Preset	In4	Input4	<input checked="" type="checkbox"/>	- Auto +	Default1:4096x2160P@60-444 HDR.HLG ▾
Advanced	All		<input checked="" type="checkbox"/>	- Auto +	Default1:4096x2160P@60-444 HDR.HLG ▾
System	Copy EDID From: Default1:4096x2160P@60-444 HDR.HLG LPCM 2.0 XXX ▾ to User1 ▾ Apply				
	User EDID: <input type="text"/> Browse to User1 ▾ Upload				

```
Default1:4096x2160P@60-444 HDR:HLG LPCM:2.0 XXX1234
Default2:4096x2160P@60-420 HDR:HLG LPCM:2.0 XXX1234
Default3:4096x2160P@30-444 HDR:HLG LPCM:2.0 XXX1234
Default4:1920x1080P@120-444 HDR:HLG LPCM:2.0 XXX1234
User1:1920x1080P@60-444 HDR:None ERR:ERR SAM0D1A
User2:4096x2160P@60-444 HDR:HLG LPCM:2.0 XXX1234
User3:4096x2160P@60-444 HDR:HLG LPCM:2.0 XXX1234
User4:4096x2160P@60-444 HDR:HLG LPCM:2.0 XXX1234
Output1:1920x1080P@60-444 HDR:None ERR:ERR SAM0D1A
Output2:Invalid
Output3:Invalid
Output4:Invalid
Temp1:Invalid
```

5) USER EDID can save the EDID as Bin document to User1~4. Click Browse to find the route of EDID, select User1~4 and click upload to save it.

User EDID : Browse to User1

6) Copy EDID of sink to User1~4

Copy EDID From to User1

13.3 Output Menu


- 1) Rename: Output name can be changed, double click output1~4 to modify
- 2) Video: Click the green button to enable or disable the video outputs.
- 3) Audio HDMI: Click the green button to enable or disable the audio outputs.

Status	Input	Output	Renames	Video	Audio HDMI	HDMI Src	Audio Dec	Dec Src	Format
		Out1	Output1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	HDMI4	<input checked="" type="checkbox"/>	Auto ENC	Auto
		Out2	Output2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Auto HDMI	<input checked="" type="checkbox"/>	Auto HDMI	Auto
		Out3	Output3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Auto HDMI	<input checked="" type="checkbox"/>	Auto HDMI	Auto
		Out4	Output4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Auto HDMI	<input checked="" type="checkbox"/>	Auto HDMI	Auto
		All		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	HDMI1	<input checked="" type="checkbox"/>	HDMI1	Auto

4) HDMI Src Switch HDMI output audio, click the drop-down box to select HDMI1-4, ENC1-4, Auto HDMI, Auto ENC 10 options, no need to confirm after the selection, automatic effect.

```
HDMI1
HDMI2
HDMI3
HDMI4
ENC1
ENC2
ENC3
ENC4
Auto HDMI
Auto ENC
```

- 5) Audio Dec: Turn on/off Audio Extraction
- 6) Dec Src: audio extraction switching, click the drop-down list box to select HDMI1-4 and AUTO HDMI options. The options take effect automatically without confirmation.
- 7) Format: Output video format, the default is auto. Following the output TV EDID specifications, you can manually select 4K60, 4K30, 1080P60, 720P60.

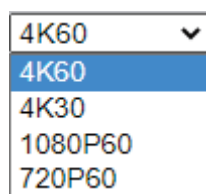

13.4 Matrix

- 1) Input1~4 corresponds to the input of matrix access 1~4, Output1~4 corresponds to the output of matrix 1~4, click the mouse button can directly realize the matrix switch.
- 2) Output all indicates that all outputs are switched to one input.
- 3) If the button turns blue, it indicates the input signal source corresponding to the current output TV.




13.5 Preset Menu


Preset can be used to call, save, clear and customize the scene name.




1) Seamless matrix can complete P2P, input1, input2, input3, input4. Click the drop-down box to select "Call", click "Save" to save the current scene, and click "Clear" to clear the scene to the default value.

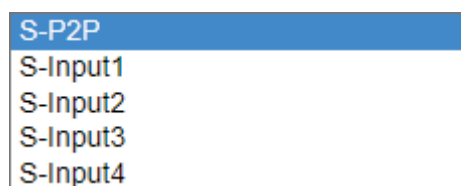

2) Video wall can customize the new scene. The default mode is the built-in wall mode of the system. Click the drop-down box to select call, click Save to save the current scene, and click "Clear" to clear the scene to the default value.

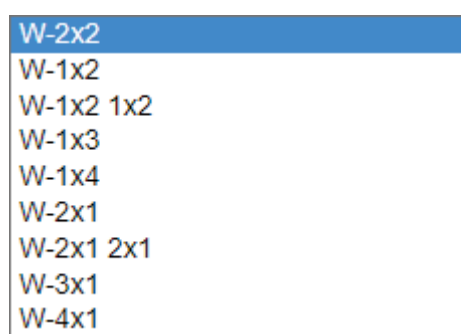

3) Multi View can implement that display 4 pictures on the same screen and has multiple split display modes; The new scene mode can be customized. Click the drop-down box to select "Call" to call directly, click "Save" to save the current scene, and click "Clear" to clear the scene to default value.

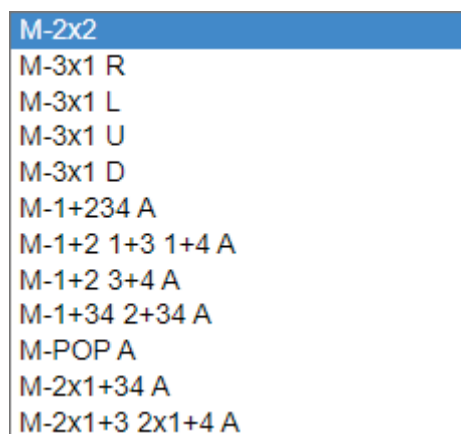

4) Scene can save and customize scene. There are 8 scenes. The default scene is the same as factory setting.

5) Rename can change the scene name. Double click to modify the name.

13.6 Advance

- 1) PIP mode switch. Click the button to enable or disable the mode.
- 2) Crop-X0 (Image cropping starting point of horizontal coordinates, range 0~6000)
Crop-Y0 (Image cropping starting point of vertical coordinates, range 0~6000)
Crop-X1 (Image cropping ending point of horizontal coordinates, range 0~6000)
Crop-Y1 (Image cropping ending point of vertical coordinates, range 0~6000)
Zoom-X0 (Image scaling starting point of horizontal coordinates, range 0~6000)
Zoom-Y0 (Image scaling starting point of vertical coordinates, range 0~6000)
Zoom-X1 (Image scaling ending point of horizontal coordinates, range 0~6000)
Zoom-Y1 (Image scaling ending point of vertical coordinates, range 0~6000)

****Press “Apply” after inputting the coordinates.**

Output	PIP	Crop-X0	Crop-Y0	Crop-X1	Crop-Y1	Zoom-X0	Zoom-Y0	Zoom-X1	Zoom-Y1	Confirm
Out1	<input type="checkbox"/>	0	0	6000	6000	0	0	6000	6000	Apply
Out2	<input type="checkbox"/>	0	0	6000	6000	0	0	6000	6000	Apply
Out3	<input type="checkbox"/>	0	0	6000	6000	0	0	6000	6000	Apply
Out4	<input type="checkbox"/>	0	0	6000	6000	0	0	6000	6000	Apply
All	<input type="checkbox"/>	0	0	6000	6000	0	0	6000	6000	Apply

13.7 System

- 1) Network includes Mac address, IP, mask, gate, DHCP, TCP port. Mac address cannot be modified. IP address can be modified in condition that DHCP is off and a highest level account is required.
- 2) Account Management can revise account. A high level account cannot be modified by a low level account which can modify the current login account only.
- 3) Reboot
- 4) Factory Simple: restore partial factory settings.
- 5) Factory User: restore all factory settings.

Network

Mac Address :	48 3B 4E 7C 5A 8D
IP Address :	192.168.0.17
Net Mask Address :	255.255.255.0
Gate Way Address :	192.168.0.1
DHCP :	<input checked="" type="checkbox"/>
TCP Port :	8080

Account management

User Name :	
New Password :	
Confirm the Password :	

Reboot :

Factory Simple :

Factory User :

14. Firmware Updating


14.1 MCU application layer upgrade

Open the software [UART_ISP.exe](#) in PC, select the correct port, the baud rate 115200, input the "A1" in port, and select the path (.bin format) of the program, and click “update” to complete the upgrade.



14.2 GUI Web Page Upgrade

Open software [UART_ISP_V1.7.exe](#) in PC, select correct port, baud rate 115200, input F0 and select a program (xxx.HTML) in path, click update to complete upgrade.

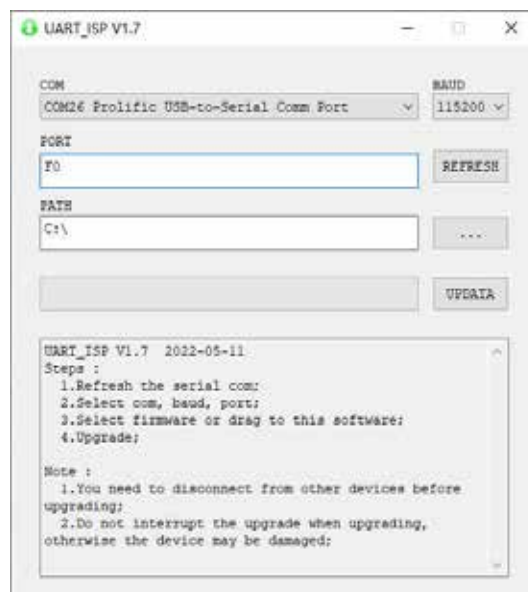

15. Maintenance

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner or benzene to clean this unit.

16. Product Service

1) Damage requiring service:

The unit should be serviced by qualified service personnel if:

- (a) The DC power supply cord or AC adaptor has been damaged;
- (b) Objects or liquids have gotten into the unit;
- (c) The unit has been exposed to rain;
- (d) The unit does not operate normally or exhibits a marked change in performance; The unit has been dropped or the cabinet damaged.

2) Servicing Personnel: Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.

3) Replacement parts: When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other Hazards.

4) Safety check: After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

17. Warranty

If your product does not work properly because of a defect in materials or workmanship, our Company (referred to as "the warrantor") will, for the length of the period indicated as below, **(Parts)1 Year, Labor(90) Days** which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

During the "Labor" Limited Warranty period there will be no charge for labor.

During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.